

Panel PC's



Industrial PC's



SBC's



Electronic Design



Industrial Displays



Embedding the future

Why Choose DSL?

- ✓ Lifetime technical support
- ✓ Fully customisable products
- ✓ Product branding (bezel colours + company logos)
- ✓ Free pre-installation of OS and your software



Our Services

- ✓ Electronic Design
- ✓ Production Management
- ✓ Assembly and test
- ✓ Bespoke BIOS creation



sales@dsl-ltd.co.uk

or call us on +44 (0)1462 675530





CT-CCV6X

Intel® Atom D2000/N2000 Series

COM Express™ Type 6 Module

User's Manual

Version 1.0

C&T Solution Inc.
12F. -1, No.700, Zhongzheng Rd., Zhonghe Dist., New Taipei City 235, Taiwan

TEL: 886-2-77317888

<http://www.candsolution.com>

Table of Contents

I.	Preface	5
1.1	Disclaimer	5
1.2	Copyright Notice.....	5
1.3	Trademarks Acknowledgment.....	5
II.	Introduction.....	6
2.1	Product Description.....	6
2.2	Specifications	7
2.3	Block Diagram.....	9
2.4	SKU.....	10
III.	Mechanical Specification.....	11
3.1	Module Dimensions.....	11
3.2	Layout	12
3.3	Connectors.....	14
3.3.1	LPC Debug Port: CN2.....	14
3.3.2	CPLD JTAGE: CN3.....	14
3.3.3	COM Express Connectors	14
3.4	Thermal Solutions	18
3.4.1	Heat Sink	18
3.4.2	Heat Spreader.....	19
IV.	Features & Interfaces.....	21
4.1	Processor.....	21
4.2	BIOS.....	21
4.3	System Memory	21
4.4	Graphics.....	21
4.4.1	Analog Display Port.....	21
4.4.2	LVDS.....	22
4.4.3	Digital Display Interfaces (DDI)	22
4.5	Chipset.....	25
4.6	USB.....	25
4.6.1	USB 2.0.....	25
4.6.1	USB 3.0.....	26
4.7	SATA.....	26
4.8	PCI Express	27
4.8.1	PCI Express x1	27
4.9	High Definition Audio.....	27
4.10	Ethernet.....	28

4.11	LPC	2 8
4.12	SPI	2 9
4.13	UART	2 9
4.14	SMBus.....	2 9
4.15	ExpressCard	3 0
4.16	General Purpose Input Output	3 0
4.16.1	GPIO Configuration.....	3 0
4.16.2	Registers Description.....	3 1
4.17	Power and System Management Signals.....	3 3
4.18	Thermal Management Signals	3 4
4.19	Miscellaneous Signals.....	3 4
4.20	Watchdog Timer	3 5
4.20.1	Board Design	3 5
4.20.2	PSUEDO CODE.....	3 5
V.	SYSTEM BIOS.....	3 7
5.1	Main	3 7
5.2	Advanced	3 8
5.2.1	ACPI Settings.....	3 9
5.2.2	Trusted Computing.....	4 0
5.2.3	CPU Configuration	4 1
5.2.4	IDE Configuration.....	4 2
5.2.5	USB Configuration	4 3
5.2.6	Hardware Monitor.....	4 4
5.2.7	W83627DHG Super IO Configuration	4 5
5.2.8	Serial Port Console Redirection	4 8
5.2.9	PPM Configuration	4 9
5.3	Chipset.....	5 0
5.3.1	Host Bridge	5 1
5.3.2	South Bridge	5 3
5.4	Boot.....	5 6
5.4.1	CSM parameters	5 7
5.5	Security	5 8
5.6	Save and Exit	5 9
VI.	Address Map.....	6 0
6.1	I/O Port Address Map.....	6 0
6.2	Interrupt Controller (IRQ) Map.....	6 2
6.3	Memory Map	6 5

VII. Electrical Specification	6	6
7.1 Input Power	6	6

I. Preface

1.1 Disclaimer

All specifications and information in this User's Manual are believed to be accurate and up to date. C&T Solution Inc. does not guarantee that the contents herein are complete, true, accurate or non-misleading. The information in this document is subject to change without notice and does not represent a commitment on the part of C&T Solution Inc.

C&T Solution Inc. disclaims all warranties, express or implied, including, without limitation, those of merchantability, fitness for a particular purpose with respect to contents of this User's Manual. Users must take full responsibility for the application of the product.

1.2 Copyright Notice

All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, without the prior written permission of C&T Solutions Inc.

Copyright © 2012 C&T Solutions Inc.

1.3 Trademarks Acknowledgment

Intel®, Celeron® and Pentium® are trademarks of Intel Corporation.

Windows® is registered trademark of Microsoft Corporation.


AMI is trademark of American Megatrend Inc.

IBM, XT, AT, PS/2 and Personal System/2 are trademarks of International Business Machines Corporation

All other products and trademarks mentioned in this manual are trademarks of their respective owners.

II. Introduction

2.1 Product Description

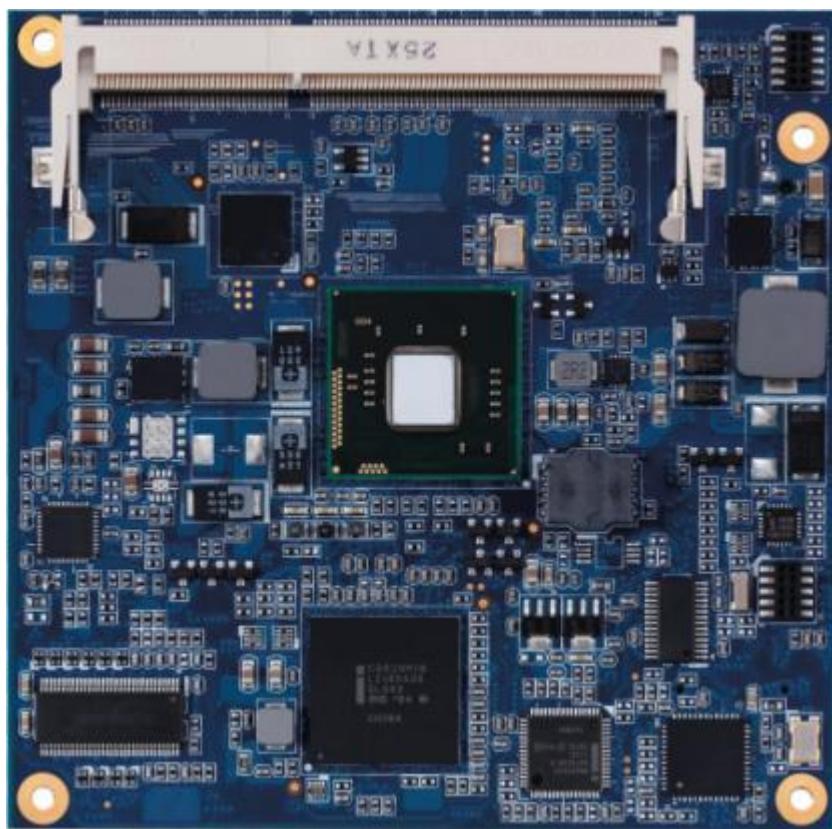


The CT-CCV6X is a new COM (computer-on-module) Express® compact form factor (95x95mm) in embedded computing platforms. It combines the onboard Intel® Atom D2550/N2600 processor with Intel® NM10 Express chipset. The CT-CCV6X is based on the COM Express® specification and features a standardized connector layout that carries a specified set of signals. With the Type 6 pin-out connectors, the CT-CCV6X supports DDI/LVDS/VGA, SATA, HD audio, Gigabit Ethernet, PCIe and USB3.0. This system requires a Carrier Board to bring out I/O and power up. The benefit of this standardization pin-out is making the application design more flexible. To accommodate different ODM requirements, the COM Express module with a Carrier Board is the best cost-effective solution and reduces development time.

2.2 Specifications

- **CPU**
 - Intel® Atom D2550 processor, 1.86GHz
 - Intel® Atom N2600 processor, 1.6GHz
- **Chipset**
 - Intel® NM10 PCH
- **System Memory**
 - One 204-pin DDR3 SODIMM socket
 - 800MHz or 1066MHz
 - Up to 4GB at Intel® Atom D2550 processor
 - Up to 2GB at Intel® Atom N2600 processor
- **BIOS**
 - AMI uEFI BIOS
 - 2MB SPI Flash ROM
- **SSD**
 - 16GB SSD onboard
- **TPM**
 - Trusted Platform Module compatible with TPM1.2
 - Infineon SLB9635
- **Graphics**
 - Dual display
 - Graphic core frequency
 - ◆ 640MHz at D2550 processor
 - ◆ 400MHz at N2600 processor
 - CRT interface supports up to 1920x1200
 - Single channel of LVDS interface
 - ◆ 1-ch 24-bit LVDS supports resolution up to 1440x900 MHz at D2550 processor
 - ◆ 1-ch 18-bit LVDS supports resolution up to 1366x768 MHz at N2600 processor
 - Two DDI ports supports HDMI / DVI / DisplayPort / eDP
- **Ethernet**
 - Intel® 82583V GbE controller
 - One 10/100/1000 Base-Tx
- **Audio**

- Integrated in chipset Intel® NM10
- **SATA Interface**
 - One SATA 3Gb/s port
 - Optional second SATA
- **PCIe Lane**
 - Two PClex1 Lane
 - Optional third PClex1 Lane
- **USB Interface**
 - Eight USB 2.0 ports
 - Four USB 3.0 ports
- **LPC Interface**
- **SMBus**
- **SPI Interface**
- **8-bit GPIO**
- **Watchdog Timer**
- **H/W Monitor**
- **Power Management**
 - ACPI (Advanced Configuration and Power Interface)
- **Form Factor**
 - Compact size, 95mm x 95mm

2.3 Block Diagram

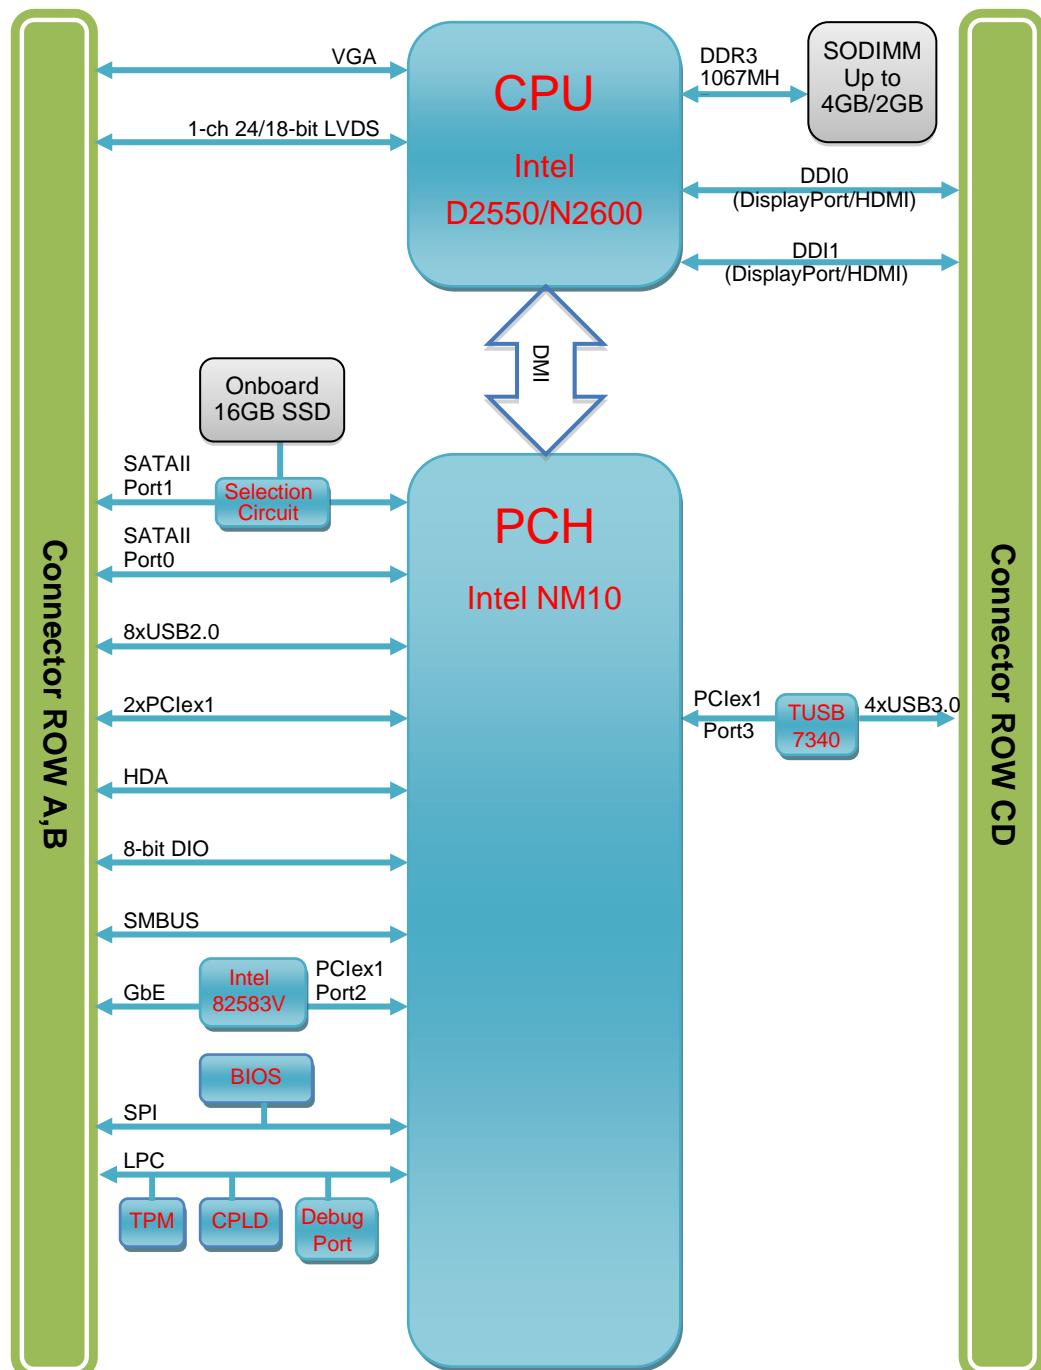

2.4 SKU

Product Number	Processor	PCH	Features
CT-CCV61	Intel Atom D2550	NM10	1xDDR3, 24-bit LVDS, 2xPClex1, GbE, 4xUSB3.0, 8xUSB2.0, 1xSATA, onboard 16GB SSD, TMP1.2
CT-CCV62	Intel Atom N2600	NM10	1xDDR3, 18-bit LVDS, 2xPClex1, GbE, 4xUSB3.0, 8xUSB2.0, 1xSATA, onboard 16GB SSD, TMP1.2


III. Mechanical Specification


3.1 Module Dimensions

The PCB size of CT-CCV6X is 95mm x 95mm, the standard COM Express compact Module size.

The holes shown in the drawing below is for stacking the module with the Heat Spreader / Heat Sink and the Carrier Board. The mounting holes are 2.7mm, and the 2.5mm hardware shall be used. The position and the dimension of the holes are shown in the unit of millimeters.

Top View:

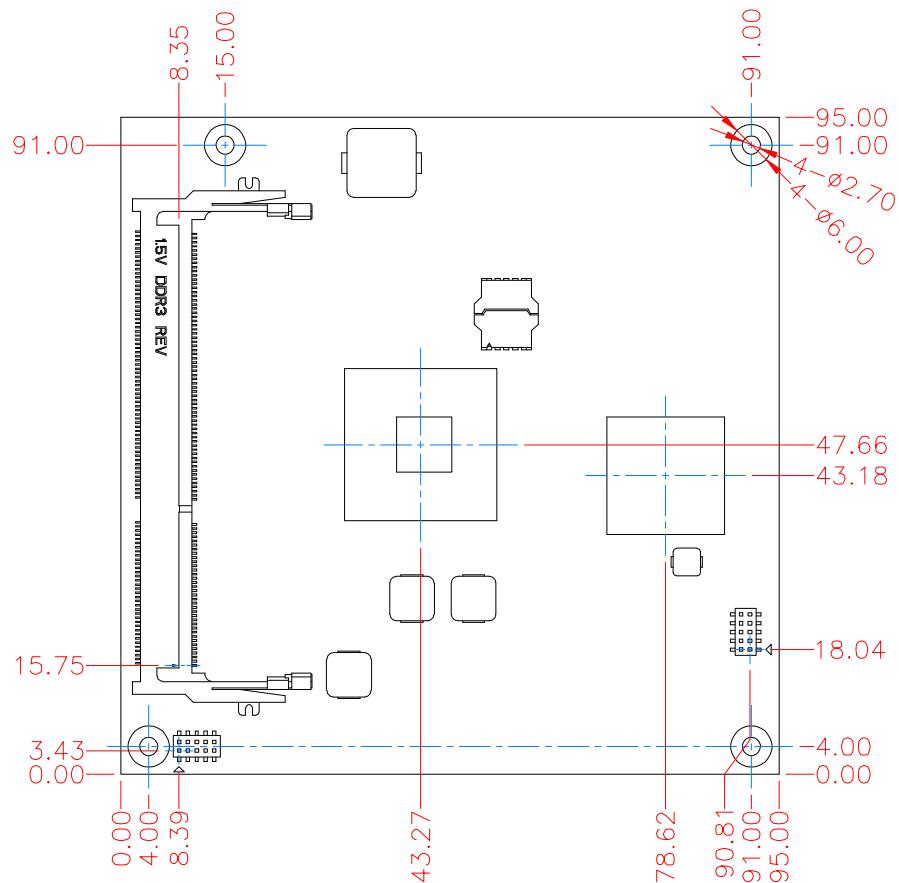


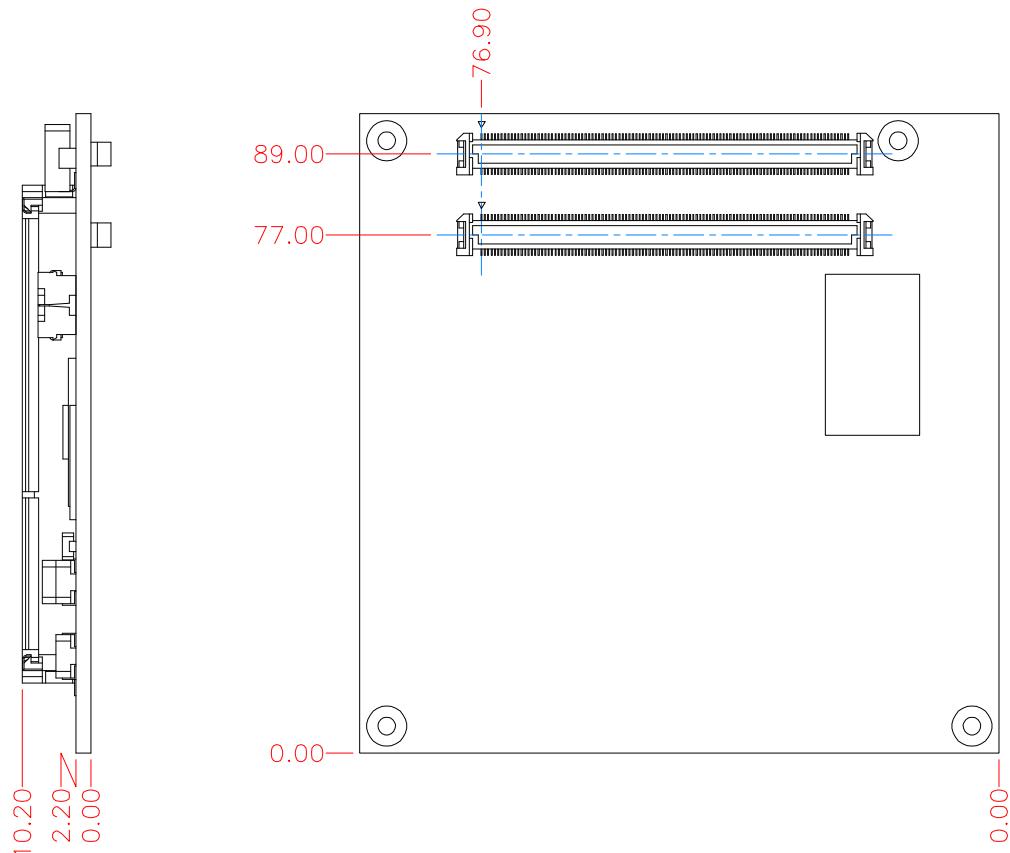Side View and Bottom View:


3.2 Layout

There is one SODIMM socket mounted on the top side of the CT-CCV6X. Two 220-pin COM Express connectors are mounted at the bottom side of the PCB.

Top View:

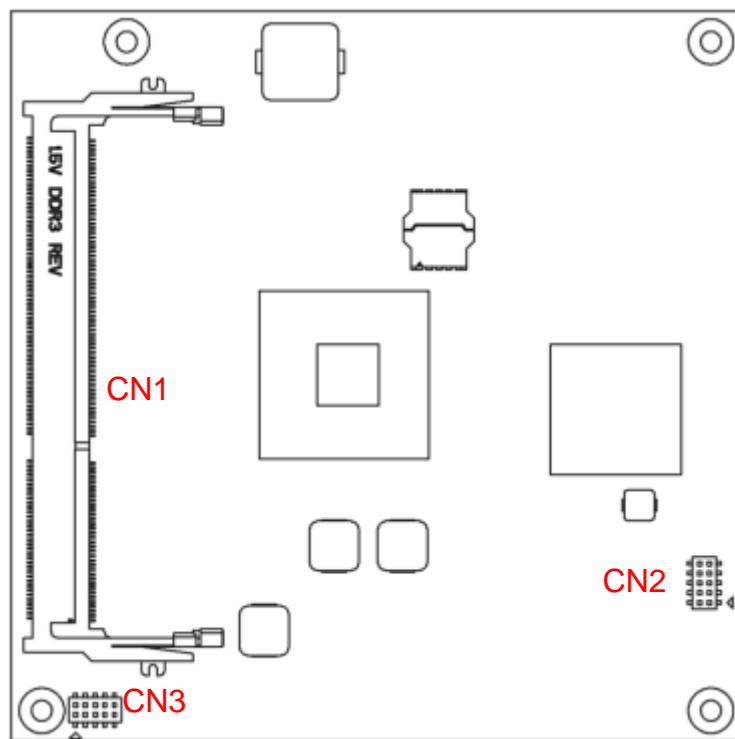

Bottom View:

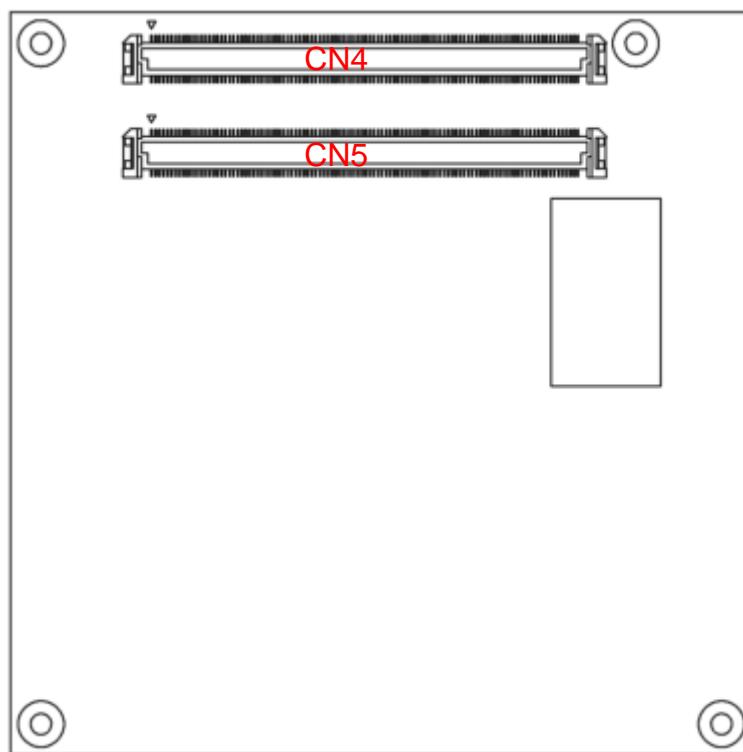

3.3 Connectors

Connector	Description
CN1	SODIMM Socket
CN2	LPC Debug Port
CN3	CPLD JTAGE
CN4	COM™ Express connector Row A, B
CN5	COM™ Express connector Row C, D

3.3.1 LPC Debug Port: CN2


Pin	Signal	Pin	Signal
1	GND	2	3.3V
3	LPC_AD3	4	BIOS_DIS0-L
5	LPC_AD2	6	RESET
7	LPC_AD1	8	CLOCK
9	LPC_AD0	10	FRAME

3.3.2 CPLD JTAGE: CN3

Pin	Signal	Pin	Signal
1	3.3V	2	GND
3	TDO	4	GND
5	TDI	6	GND
7	TMS	8	GND
9	TCK	10	GND

3.3.3 COM Express Connectors

The CT-CCV6X is connected to the carrier board via two 220-pin connectors. Each connector is break down into two rows. The first connector, CN4, consists Row A and Row B; the second connector, CN5, consists Row C and Row D. Their pin-out is as table below.

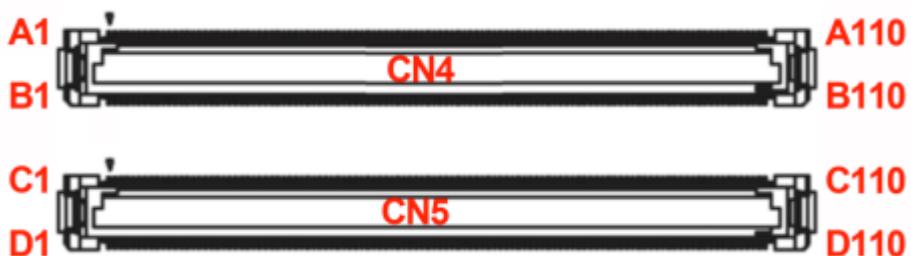

Pin	Row A	Row B	Row C	Row D
1	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
2	GBE0_MDI3-	GBE0_ACT#	GND	GND
3	GBE0_MDI3+	LPC_FRAME#	USB_SSRX0-	USB_SSTX0-
4	GBE0_LINK100#	LPC_AD0	USB_SSRX0+	USB_SSTX0+
5	GBE0_LINK1000#	LPC_AD1	GND	GND
6	GBE0_MDI2-	LPC_AD2	USB_SSRX1-	USB_SSTX1-
7	GBE0_MDI2+	LPC_AD3	USB_SSRX1+	USB_SSTX1+
8	GBE0_LINK#	LPC_DRQ0#	GND	GND
9	GBE0_MDI1-	LPC_DRQ1#	USB_SSRX2-	USB_SSTX2-
10	GBE0_MDI1+	LPC_CLK	USB_SSRX2+	USB_SSTX2+
11	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
12	GBE0_MDI0-	PWRBTN#-	USB_SSRX3-	USB_SSTX3-
13	GBE0_MDI0+	SMB_CK	USB_SSRX3+	USB_SSTX3+
14	GBE0_CTREF	SMB_DAT	GND	GND
15	SUS_S3#	SMB_ALERT#	NC	DDI1_CTRLCLK_AUX+
16	SATA0_TX+	SATA1_TX+(Reserved)	NC	DDI1_CTRLDATA_AUX-
17	SATA0_TX-	SATA1_TX-(Reserved)	NC	NC
18	SUS_S4#	SUS_STAT#	NC	NC
19	SATA0_RX+	SATA1_RX+(Reserved)	NC	NC
20	SATA0_RX-	SATA1_RX-(Reserved)	NC	NC
21	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
22	NC	NC	NC	NC
23	NC	NC -	NC	NC
24	SUS_S5#	PWR_OK	DDI1_HPD	NC
25	NC	NC	NC	NC
26	NC	NC -	NC	DDI1_PAIR0+
27	BATLOW#	WDT	NC	DDI1_PAIR0-
28	(S)ATA_ACT#	AC/HAD_SDIN2	NC	NC
29	AC/HDA_SYNC	AC/HAD_SDIN1	NC	DDI1_PAIR1+
30	AC/HAD_RST#	AC/HAD_SDIN0	NC	DDI1_PAIR1-
31	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
32	AC/HDA_BITCLK	SPKR	DDI2_CTRLCLK_AUX+	DDI1_PAIR2+
33	AC/HAD_SDOUT	I2C_CK	DDI2_-	DDI1_PAIR2-
34	BIOS_DIS0#	I2C_DAT	DDI2_DDC_AUX_SEL	DDI1_DDC_AUX_SEL
35	THRMTRIP#	THRM#	NC	NC
36	USB6-	USB7-	NC	DDI1_PAIR3+
37	USB6+	USB7+	NC	DDI1_PAIR3-
38	USB_6_7_OC#	USB_4_5_OC#	NC	NC

Pin	Row A	Row B	Row C	Row D
39	USB4-	USB5-	NC	DDI2_PAIR0+
40	USB4+	USB5+	NC	DDI2_PAIR0-
41	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
42	USB2-	USB3-	NC	DDI2_PAIR1+
43	USB2+	USB3+	NC	DDI2_PAIR1-
44	USB_2_3_OC#	USB_0_1_OC#	NC	DDI2_HPD
45	USB0-	USB1-	NC	NC
46	USB0+	USB1+	NC	DDI2_PAIR2+
47	VCC_RTC	EXCD1_PERST#	NC	DDI2_PAIR2-
48	EXCD0_PERST#	EXCD1_CPPE#	NC	NC
49	EXCD0_CPPE#	SYS_RESET#	NC	DDI2_PAIR3+
50	LPC_SERIRQ	CB_RESET#	NC	DDI2_PAIR3-
51	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
52	NC	NC	NC	NC
53	NC	NC	NC	NC
54	GPI0	GPO1	NC	NC
55	NC	NC	NC	NC
56	NC	NC	NC	NC
57	GND	GPO2	NC	GND
58	NC	NC	NC	NC
59	NC	NC	NC	NC
60	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
61	PCIE2_TX+	PCIE2_RX+	NC	NC
62	PCIE2_TX-	PCIE2_RX-	NC	NC
63	GPI1	GPO3	NC	NC
64	PCIE1_TX+	PCIE1_RX+	NC	NC
65	PCIE1_TX-	PCIE1_RX-	NC	NC
66	GND	WAKE0#	NC	NC
67	GPI2	WAKE1#	NC	GND
68	PCIE0_TX+	PCIE0_RX+	NC	NC
69	PCIE0_TX-	PCIE0_RX-	NC	NC
70	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
71	LVDS_A0+	NC	NC	NC
72	LVDS_A0-	NC	NC	NC
73	LVDS_A1+	NC	GND	GND
74	LVDS_A1-	NC	NC	NC
75	LVDS_A2+	NC	NC	NC
76	LVDS_A2-	NC	GND	GND

Pin	Row A	Row B	Row C	Row D
77	LVDS_VDD_EN	NC	NC	NC
78	LVDS_A3+	NC	NC	NC
79	LVDS_A3-	LVDS_BKLT_EN	NC	NC
80	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
81	LVDS_A_CK+	NC	NC	NC
82	LVDS_A_CK-	NC	NC	NC
83	LVDS_I2C_CK	LVDS_BKLT_CTRL	NC	NC
84	LVDS_I2C_DAT	VCC_5V_SBY	GND	GND
85	GPI3	VCC_5V_SBY	NC	NC
86	NC	VCC_5V_SBY	NC	NC
87	NC	VCC_5V_SBY	GND	GND
88	PCIE_CK_REF0+	BIOS_DIS1#	NC	NC
89	PCIE_CK_REF0-	VGA_RED	NC	NC
90	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
91	SPI_POWER	VGA_GRN	NC	NC
92	SPI_MISO	VGA_BLU	NC	NC
93	GPO0	VGA_HSYNC	GND	GND
94	SPI_CLK	VGA_VSYNC	NC	NC
95	SPI_MOSI	VGA_I2C_CK	NC	NC
96	TPM_PP	VGA_I2C_DAT	GND	GND
97	NC	SPI_CS#	NC	NC
98	SER0_TX	NC	NC	NC
99	SER0_RX	NC	NC	NC
100	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)
101	SER1_TX	FAN_PWMOUT	NC	NC
102	SER1_RX	FAN_TACHIN	NC	NC
103	LID#	SLEEP#	GND	GND
104	VCC_12V	VCC_12V	VCC_12V	VCC_12V
105	VCC_12V	VCC_12V	VCC_12V	VCC_12V
106	VCC_12V	VCC_12V	VCC_12V	VCC_12V
107	VCC_12V	VCC_12V	VCC_12V	VCC_12V
108	VCC_12V	VCC_12V	VCC_12V	VCC_12V
109	VCC_12V	VCC_12V	VCC_12V	VCC_12V
110	GND(FIXED)	GND(FIXED)	GND(FIXED)	GND(FIXED)

3.4 Thermal Solutions


There are two thermal solutions for the COM Express Module CT-CCV6X to dissipate the heat. One is by using a heat sink and the other one is by using a heat spreader.


3.4.1 Heat Sink

Step 1: Connect the COM Express connectors on the module, CT-CCV6X, to the corresponding COM connectors on the Carrier Board. Make sure the four holes at the corners of CT-CCV6X module align to the corresponding pillars on the Carrier Board.

Step2: Place the heat sink on top of the CT-CCV6X module.

Step3: Use four screws (M2.5x15L) to secure the heat sink with the Carrier Board through the corresponding holes on the CT-CCV6X.

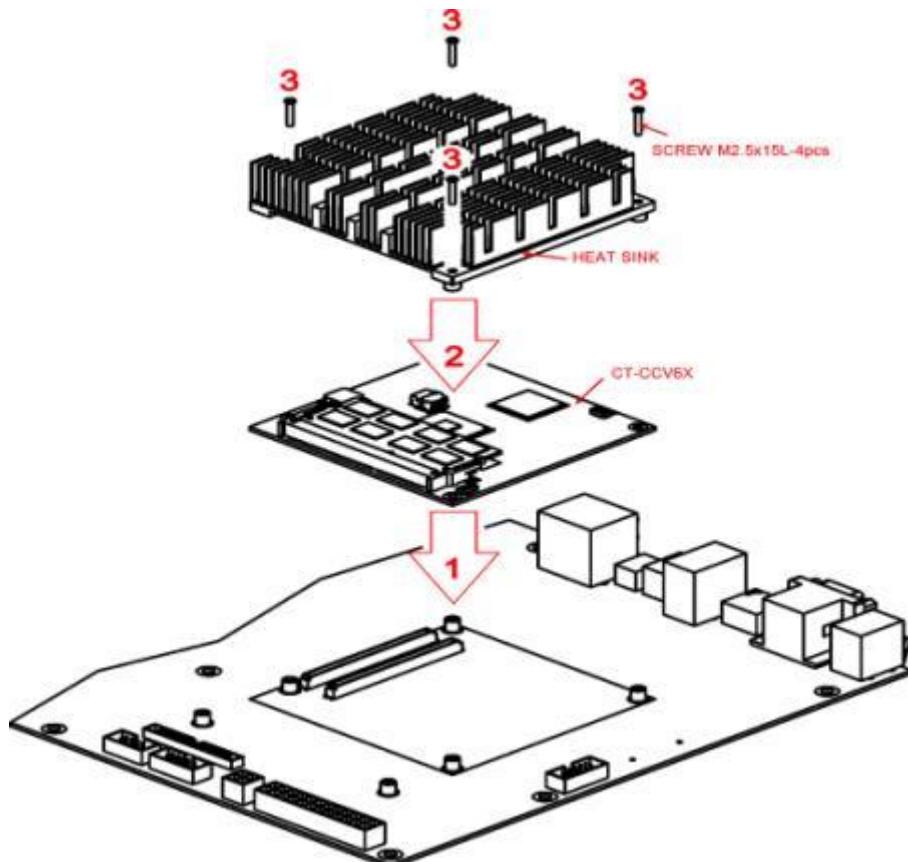

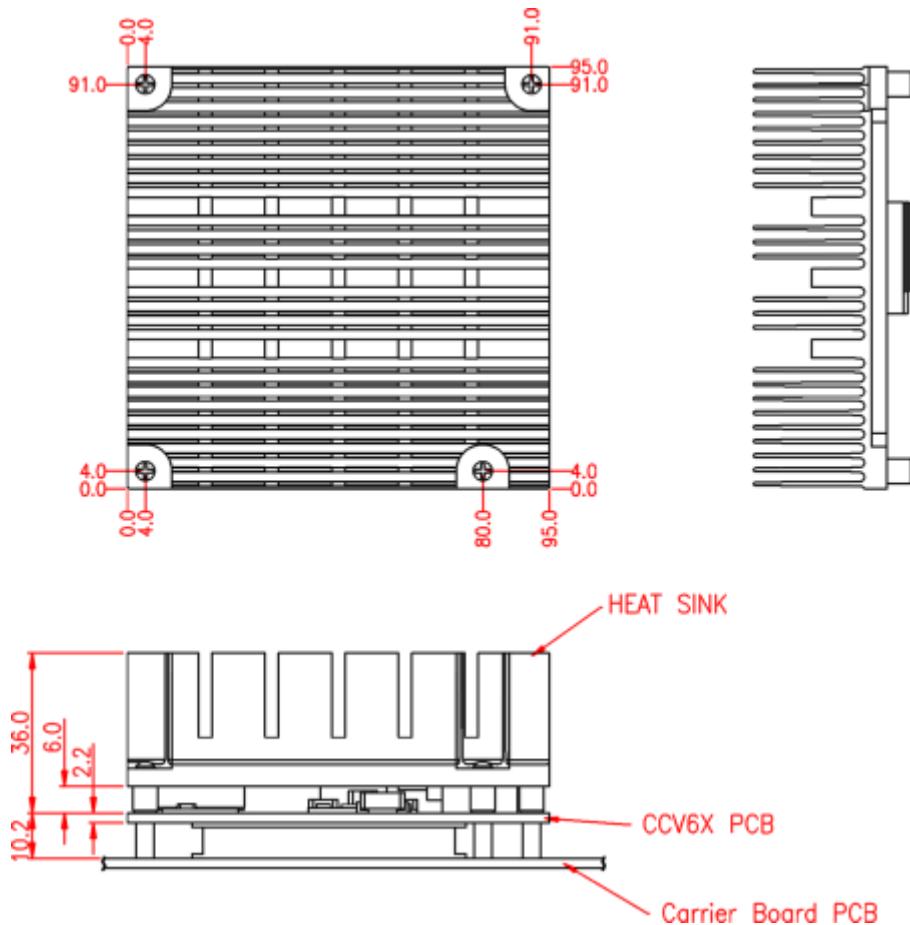




3.4.2 Heat Spreader

A heat spreader is designed for the CT-CCV6X to dissipate heat. All heat generating components are thermally conducted to the heat spreader in order to avoid hot spots. The assembly of the heat spreader with CT-CCV6X module and the Carrier board is same as the heat sink.

Step 1: Connect the COM Express connectors on the module, CT-CCV6X, to the corresponding COM connectors on the Carrier Board. Make sure the four holes at the corners of CT-CCV6X module align to the corresponding pillars on the Carrier Board.

Step2: Place the heat spreader on top of the CT-CCV6X module.

Step3: Use four screws (M2.5x15L) to secure the heat sink with the Carrier Board through the corresponding holes on the CT-CCV6X.

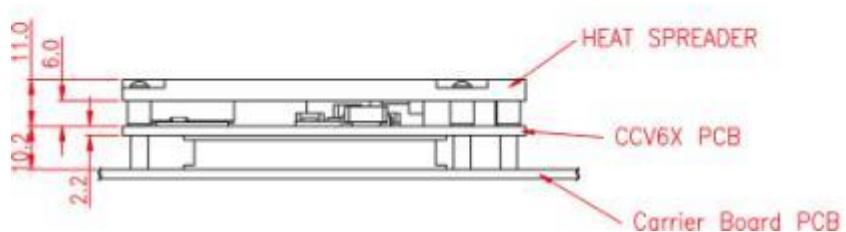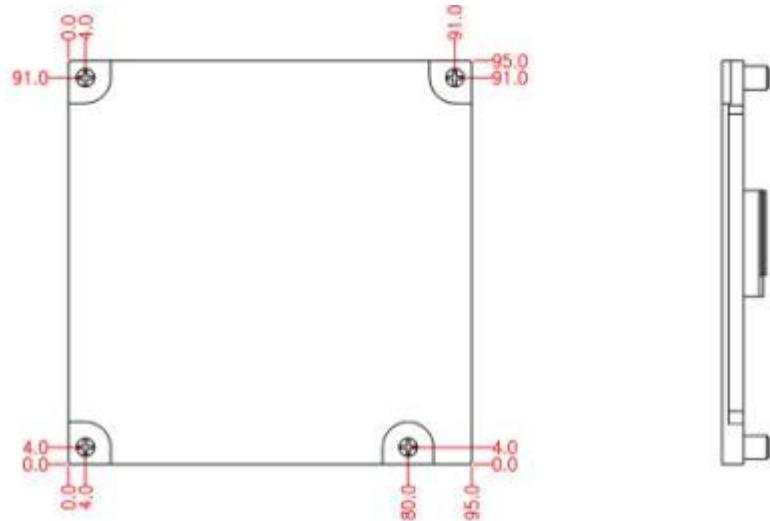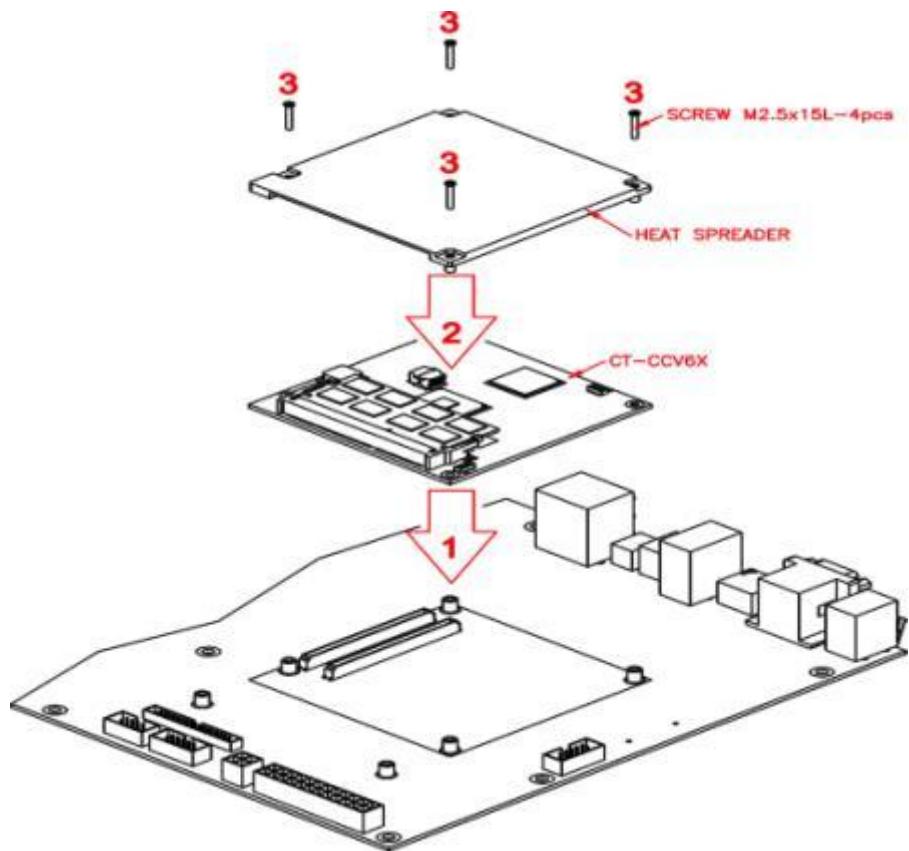

IV. Features & Interfaces

4.1 Processor

The CT-CCV6X supports Intel® Atom D2550/N2600 processor. This 64-bit and multi-core mobile processor built on 32-nanometer process technology is based on a new micro-architecture. This architecture consists a processor and Platform Controller Hub (PCH) to form a two-chip platform. The processor includes Integrated Display Engine, Processor Graphics and Integrated Memory Controller.

4.2 BIOS

The AMI uEFI BIOS, 2MB SPI Flash Rom is used in the CT-CCV6X module.

4.3 System Memory

The Integrated Memory Controller (IMC) of the processor supports one 64-bit channel of DDR3 protocols. The channel allows the data transfer rate of 800/1066MHz with a 204-pin SODIMM socket. The maximum memory size of the SODIMM socket is 4GB supported by Intel Atom D2550 on the CT-CCV6X; 2GB supported by Intel Atom N2600.

4.4 Graphics

Intel Atom Processor D2550 and N2600 contain an integrated graphics engine, video decode and a display controller that supports two pipes to LVDS, CRT, HDMI/DVI, DP, eDP. The graphic core frequency is 640 MHz at D2550 and 400 MHz at N2600.

4.4.1 Analog Display Port

The Analog Port provides a RGB signal output along with a HSYNC and VSYNC signal. There is an associated Display Data Channel (DDC) signal pair that is implemented using GPIO pins dedicated to the analog port. The intended target device is for a CRT Based monitor with a VGA connector. The Analog Port can directly drive a standard progressive scan analog monitor up to a resolution of 1920x1200 pixels with 32-bit color at 60Hz.

Signal	I/O	Description
VGA_RED	O	Red for monitor, analog DAC output, designed to drive a 37.5Ω equivalent load.
VGA_GRN	O	Green for monitor, analog DAC output, designed to drive a 37.5Ω equivalent load.
VGA_BLU	O	Blue for monitor, analog DAC output, designed to drive a 37.5Ω equivalent load.
VGA_HSYNC	O	Horizontal sync output to VGA monitor
VGA_VSYNC	O	Vertical sync output to VGA monitor
VGA_I2C_CLK	I/O	Monitor clock line
VGA_I2C_DATA	I/O	Monitor data line

4.4.2 LVDS

The LVDS transmitter channel of D2550 consists of 4 data pairs and a clock pair; N2600 consists of 3 data pairs and a clock pair. The LVDS data pair is used to transfer pixel data as well as the LCD timing control signals. The maximum resolution is 1440x900 at D2550 CPU and 1366x768 at N2600 CPU.

Signal	I/O	Description
LVDS_A[3:0]+	O	Differential data output - positive LVDS_A3+ support at D2550 only
LVDS_A[3:0]-	O	Differential data output – negative LVDS_A3- support at D2550 only
LVDS_A_CLK+	O	Differential clock output - positive
LVDS_A_CLK-	O	Differential clock output - negative
LVDS_VDD_EN	O	LVDS panel power enable
LVDS_BKLT_EN	O	Panel backlight enable control
LVDS_BKLT_CTR	O	Panel backlight brightness control
LVDS_I2C_CLK	I/O	LVDS flat panel I2C clock for EDID read and control.
LVDS_I2C_DATA	I/O	LVDS flat panel I2C data for EDID read and control.

4.4.3 Digital Display Interfaces (DDI)

The Intel Atom Processor D2550 and N2600 can drive HDMI, DVI, eDP and Display Port natively. Its two display ports can support up to two different images on two different display devices.

Signal	I/O	Description
DDI[1:2]_PAIR[0:3]+	O	DDI 1 and 2 Pair[0:3] differential pairs
DDI[1:2]_PAIR[0:3]-		
DDI[1:2]_DDC_AUX_SEL	I	Selects the function of DDI[1:2]_CTRLCLK_AUX+ and DDI[1:2]_CTRLDATA_AUX-. This pin shall have a 1M pull-down to logic ground on the Module. If this input is floating the AUX pair is used for the DP AUX+/- signals. If pulled-high the AUX pair contains the CTRLCLK and CTRLDATA signals.
DDI[1:2]_CTRLCLK_AUX+	I/O	DP AUX+ function if DDI[1:2]_DDC_AUX_SEL is no connect
	I/O	HDMI/DVI I2C CTRLCLK if DDI[1:2]_DDC_AUX_SEL is pulled high
DDI[1:2]_CTRLDATA_AUX-	I/O	DP AUX- function if DDI[1:2]_DDC_AUX_SEL is no connect
	I/O	HDMI/DVI I2C CTRLDATA if DDI[1:2]_DDC_AUX_SEL is pulled high
DDI[1:2]_HPD	I	DDI Hot-Plug Detect

	Signal	Pin	eDP/DP	HDMI/DVI
DDI 1	DDI1_PAIR0+	D26	DP1_LANE0+	TMDS1_DATA2+
	DDI1_PAIR0-	D27	DP1_LANE0-	TMDS1_DATA2-
	DDI1_PAIR1+	D29	DP1_LANE1+	TMDS1_DATA1+
	DDI1_PAIR1-	D30	DP1_LANE1-	TMDS1_DATA1-
	DDI1_PAIR2+	D32	DP1_LANE2+	TMDS1_DATA0+
	DDI1_PAIR2-	D33	DP1_LANE2-	TMDS1_DATA0-
	DDI1_PAIR3+	D36	DP1_LANE3+	TMDS1_CLK+
	DDI1_PAIR3-	D37	DP1_LANE3-	TMDS1_CLK-
	DDI1_CTRLCLK_AUX+	D15	DP1_AUX+	TMDS1_SCL
	DDI1_CTRLDATA_AUX-	D16	DP1_AUX-	TMDS1_SDA
	DDI1_DDC_AUX_SEL	D34	CONFIG1 (pull down to GND)	Pull up to 5V
DDI 2	DDI2_PAIR0+	D39	DP2_LANE0+	TMDS2_DATA2+
	DDI2_PAIR0-	D40	DP2_LANE0-	TMDS2_DATA2-
	DDI2_PAIR1+	D42	DP2_LANE1+	TMDS2_DATA1+
	DDI2_PAIR1-	D43	DP2_LANE1-	TMDS2_DATA1-
	DDI2_PAIR2+	D46	DP2_LANE2+	TMDS2_DATA0+
	DDI2_PAIR2-	D47	DP2_LANE2-	TMDS2_DATA0-

	DDI2_PAIR3+	D49	DP2_LANE3+	TMDS2_CLK+
	DDI2_PAIR3-	D50	DP2_LANE3-	TMDS2_CLK-
	DDI2_CTRLCLK_AUX+	C32	DP2_AUX+	HDMI2_SCL
	DDI2_CTRLDATA_AUX-	C33	DP2_AUX-	HDMI2_SDA
	DDI2_DDC_AUX_SEL	C34	CONFIG1 (pull down to GND)	Pull up to 5V
	DDI2_HPD (3.3V active high signal)	D44		

4.4.3.1 High Definition Multimedia Interface (HDMI)

The HDMI is provided for transmitting uncompressed digital audio and video signals to television sets, projectors and other video displays.

4.4.3.2 Digital Video Interface (DVI)

The PCH digital ports can be configured to drive DVI-D. DVI uses TMDS for transmitting data from the transmitter to the receiver, which is similar to the HDMI protocol but the audio and CEC. When a system has support for DVI-I port, then either VGA or the DVI-D through a single DVI-I connector can be driven but not both simultaneously.

The HDMI or DVI supports the resolution up to 1920x1200 at 60Hz.

HDMI Signal	I/O	Description
TMDS[1:2]_CLK+	O	HDMI/DVI TMDS Clock differential pair
TMDS[1:2]_CLK-		
TMDS[1:2]_DATA[0:2]+	O	HDMI/DVI TMDS lanes 0, 1 and 2 differential pairs
TMDS[1:2]_DATA[0:2]-		
HDMI[1:2]_SCL	I/O	HDMI/DVI I2C control clock
HDMI[1:2]_SDA	I/O	HDMI/DVI I2C control data

4.4.3.3 Display Port (DP)

The Display Port is a digital communication interface that utilized differential signaling to achieve a high bandwidth bus interface designed to support connections between PCs and monitors, projectors, and TV displays. The Display Port supports the resolution up to 2560x1600 at D2550 CPU and 1600x1200 at N2600 CPU.

4.4.3.4 Embedded DisplayPort (eDP)

Embedded DisplayPort (eDP) is an embedded version of the DisplayPort standard oriented towards applications such as notebook and All-In-One PCs. eDP is supported only on Digital Display Port 1. The resolution is up to 1920x1080 at D2550 CPU and 1366x768 at N2600 CPU.

DP Signal	I/O	Description
DP[1:2]_LANE[0:3]+ DP[1:2]_LANE[0:3]-	O	Uni-directional main link for the transport of isochronous streams and secondary-data packets
DP[1:2]_AUX+ DP[1:2]_AUX-	I/O	Half-duplex bi-directional AUX channel for services such as link configuration or maintenance and EDID access

4.5 Chipset

The Platform Controller Hub (PCH) used on CT-CCV6X is Intel NM10. The PCH provides extensive I/O support with two COM™ Express connectors.

4.6 USB

4.6.1 USB 2.0

The two EHCI Controllers of Intel® NM10 offer eight USB2.0 ports. Each USB2.0 port supports USB 1.1 and 2.0 compliant devices.

Signal	I/O	Description
USB[0:7]+ USB[0:7]-	I/O	USB differential pairs, channels 0 through 7
USB_0_1_OC#	I	USB over-current sense, USB 0 and 1. A pull-up for this line shall be present on the Module. An open drain driver from a USB current monitor on the Carrier Board may drive this line low. Do not pull this line high on the Carrier Board.
USB_2_3_OC#	I	USB over-current sense, USB 2 and 3. A pull-up for this line shall be present on the Module. An open drain driver from a USB current monitor on the Carrier Board may drive this line low. Do not pull this line high on the Carrier Board.
USB_4_5_OC#	I	USB over-current sense, USB 4 and 5. A pull-up for this line shall be present on the Module. An open drain driver from a USB current monitor on the Carrier Board may drive this line low. Do not pull this line high on the Carrier Board.

Signal	I/O	Description
USB_6_7_OC#	I	USB over-current sense, USB 6 and 7. A pull-up for this line shall be present on the Module. An open drain driver from a USB current monitor on the Carrier Board may drive this line low. Do not pull this line high on the Carrier Board.

4.6.1 USB 3.0

There are four USB 3.0 ports by extended from the Port 3 of the PCIe x1 interface.

Signal	I/O	Description
USB_SSRX[0:3]+	I	USB differential pairs, channels 0 through 3, receive Data/Address/Command signals
USB_SSRX[0:3]-		
USB_SSTX[0:3]+	I	USB differential pairs, channels 0 through 3, transmit Data/Address/Command signals
USB_SSTX[0:3]-		

4.7 SATA

The PCH NM10 provides two Serial ATA (SATA) ports. The Port 0 and 1 support SATA 3.0 Gb/s device transfers. This interface may be used for Serial Attached SCSI (SAS).

Signal	I/O	Description
SATA0_TX+	O	Serial ATA 0 transmit differential pair
SATA0_RX-		
SATA0_RX+	I	Serial ATA 0 receive differential pair
SATA0_RX-		
SATA1_TX+	O	Serial ATA 1 transmit differential pair (reserved)
SATA1_RX-		
SATA1_RX+	I	Serial ATA 1 receives differential pair (reserved)
SATA1_RX-		
(S)ATA_ACT#	OC	ATA (parallel and serial) activity indicator, active low

The SATA Port 0 of CT-CCV6X can be used for general SATA devices. The SATA Port 1 of CT-CCV6X has been used for onboard 16GB SSD. Also, this interface has been reserved on the COM Express connector Row B. When the onboard SSD of CT-CCV6X is not applied, the interface on the COM Express connector could be used for general SATA devices.

4.8 PCI Express

4.8.1 PCI Express x1

There are four one-lane PCI Express ports available in the PCH NM10. The ports are compliant to the PCI Express 1.0 specification running at 2.5 Gb/s. Only two PCIe x1 Ports, 0~1, are left on the CT-CCV6X COM™ Express connector since Port 2 is occupied by GbE and Port 3 is occupied by USB3.0.

Signal	I/O	Description
PCIE[0:1]_TX+	O	PCI Express Differential transmit Pairs 0 through 1
PCIE[0:1]_RX+	I	PCI Express Differential receive Pairs 0 through 1
PCIE_CK_REF0+	O	Reference clock output for all PCI Express and PCI Express Graphics lanes

4.9 High Definition Audio

The High Definition Audio (HDA) controller is integrated with PCH NM10. It communicates with the external codec(s) over the Intel® High Definition Audio serial link. The controller consists of a set of DMA engines that are used to move samples of digitally encoded data between system memory and an external codec(s). The PCH implements a single Serial Data Output signal (HDA_SDOUT) that is connected to all external codecs. Three Serial Digital Input signals (HDA_SDIN[2:0]) provided by the PCH support up to three codecs.

Signal	I/O	Description
AC/HDA_RST#	O	Reset output to CODEC, active low
AC/HDA_SYNC	O	Sample-synchronization signal to the CODEC(s)
AC/HDA_BITCLK	O	Serial data clock generated by the external CODEC(s)
AC/HDA_SDOUT	O	Serial TDM data output to the CODEC
AC/HDA_SDIN[2:0]	I/O	Serial TDM data input from up to 3 CODECs

4.10 Ethernet

The Intel® 82583V, a fully-integrated Gigabit Ethernet Media Access Control (MAC) provides 10/100/1000Mb/s Ethernet interface. The Intel® 82583V is connected to Port 2 of the PCIe x1 in the PCH. Gigabit transformer has to be designed on the Carrier Board.

The integrated GbE controller contains power management registers for PCIE, so it supports the Advanced Configuration and Power Interface (ACPI) specification. This enables the network-related activity (using an internal host wake signal) to wake up the host.

Signal	I/O	Description
GBE0_MDI[0:3]+ GBE0_MDI[0:3]-	I/O	Gigabit Ethernet Controller 0: Media Dependent Interface Differential Pairs 0, 1, 2, 3. The MDI can operate in 1000, 100 and 10 Mbit/sec modes. Some pairs are unused in some modes, per the following: 1000BASE-T 100BASE-TX 10BASE-T MDI[0]+/- B1_DA+/- TX+/- TX+/- MDI[1]+/- B1_DB+/- RX+/- RX+/- MDI[2]+/- B1_DC+/- MDI[3]+/- B1_DD+/-
GBE0_ACT#	OD	Gigabit Ethernet Controller 0 activity indicator, active low
GBE0_LINK#	OD	Gigabit Ethernet Controller 0 link indicator, active low
GBE0_LINK100#	OD	Gigabit Ethernet Controller 0 100 Mbit/sec link indicator, active low
GBE0_LINK1000#	OD	Gigabit Ethernet Controller 0 1000 Mbit/sec link indicator, active low
GBE0_CTREF	REF	Reference voltage for Carrier Board Ethernet channel 0 magnetics center tap. The reference voltage is 3.3V.

4.11 LPC

The LPC interface provides legacy I/O support on a Carrier Board via a Super I/O and system management devices.

Signal	I/O	Description
LPC_AD[3:0]	I/O	LPC multiplexed address, command and data
LPC_FRAME#	O	LPC frame indicates the start of an LPC cycle
LPC_DRQ[0:1]#	I	LPC serial DMA request input

Signal	I/O	Description
LPC_SERIRQ	I/O	LPC serial interrupt
LPC_CLK	O	LPC clock output – 33MHz nominal

4.12 SPI

The Serial Peripheral Interface (SPI) is a 4-pin interface that supports SPI-compatible flash devices. The SPI flash device can be up to 16MB (128Mb). The SPI bus is clocked at either 20MHz, 25MHz, 33MHz or 50 MHz. SPI devices selected should support one of these frequencies.

Signal	I/O	Description
SPI_CS#	O	Chip select for Carrier Board SPI - may be sourced from chipset SPI0 or SPI1
SPC_MISO	I	Data in to Module from Carrier SPI
SPI_MISI	O	Data out from Module to Carrier SPI
SPI_CLK	O	Clock from Module to Carrier SPI
SPI_POWER	O	Power supply for Carrier Board SPI – sourced from Module – nominally 3.3V. The Module shall provide a minimum of 100mA on SPI_POWER. Carriers shall use less than 100ma of SPI_POWER. SPI_POWER shall only be used to power SPI devices on the Carrier Board.

4.13 UART

The CT-CCV6X module supports two serial RX/TX ports.

Signal	I/O	Description
SER[0:1]_TX	O	UART transmitter
SER[0:1]_RX	I	UART receiver

4.14 SMBus

The SMBus port is specified for system management functions. It is used on the Module to manage system function such as reading the DRAM SPD EEPROM and setting clock synthesizer parameters. If the SMBus is used on the carrier board, then great care must be taken that no conflicts with the on-Module SMBus devices occur. It may be useful for implementation on the

Carrier Board of standards such as Smart Battery. The maximum capacitance on the Carrier Board shall not exceed 100pF.

Signal	I/O	Description
SMB_CK	I/OD	System Management Bus bidirectional clock line
SMB_DAT	I/OD	System Management Bus bidirectional data line
SMB_ALERT#	I	System Management Bus Alert – active low input can be used to generate an SMI# (System Management Interrupt) or to wake the system.

4.15 ExpressCard

ExpressCard is a small form factor expansion card that uses PCI Express or USB as the interface. It is similar in concept and scope to CardBus. The CT-CCV6X supports two Express Card interface.

Signal	I/O	Description
EXCD[0:1]_CPPE#	I	PCI ExpressCard: PCI Express capable card request, active low, one per card
EXCD[0:1]_PERST#	O	PCI ExpressCard: reset, active low, one per card

4.16 General Purpose Input Output

GPI and GPO pins may be implemented as GPIO (Module specific). GPI and GPO pins may be implemented as SDIO.

Signal	I/O	Description
GPO[0:3]	O	General purpose output pins. Upon a hardware reset, these outputs should be low
GPI[0:3]	I	General purpose input pins. Pulled high internally on the Module.

4.16.1 GPIO Configuration

Output Pin default setting is HIGH.

Pin #	GPIO#	Default Configuration
B63	GPIO7	GPO3
B57	GPIO6	GPO2
B54	GPIO5	GPO1

Pin #	GPIO#	Default Configuration
A93	GPIO4	GPO0
A85	GPIO3	GPI3
A67	GPIO2	GPI2
A63	GPIO1	GPI1
A54	GPIO0	GPI0

The GPIO function, provided by Intel Tiger Point NM10, can be accessed through GPIO Base Address Register (GPIOBASE). The configuration on CT-CCV6X is described as below.

Register	Address
GPIOBASE Base Address	0x500

The general I/O read/write function is used to access and configure the NM10. Through the I/O read or write command, the current status of GPIO can configure each pin to input or output.

4.16.2 Registers Description

4.16.2.1 GPIO Use Select Register 1 (Offset GPIOBASE+0x00)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
		GPIO3	GPIO2	GPIO1	GPIO0		

GPIO Use Select Register 2 (Offset GPIOBASE+0x30)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
GPIO7	GPIO6				GPIO5	GPIO4	

Bit X = 0 means Native Function

Bit X = 1 means GPIO Function

4.16.2.2 GPIO Input/Output Select Register 1 (Offset GPIOBASE+0x04)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
		GPIO3	GPIO2	GPIO1	GPIO0		

GPIO Input/Output Select Register 2 (Offset GPIOBASE+0x34)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
GPIO7	GPIO6				GPIO5	GPIO4	

Bit X = 0 means Output Pin

Bit X = 1 means Input Pin

4.16.2.3 GPIO Level for Input or Output Register 1 (Offset GPIOBASE+0x0C)

If Pin X is configured as output, the output value (0 or 1) could be selected by user.

If it is programmed as an input, this register reflects the state of the input signal.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
		GPIO3	GPIO2	GPIO1	GPIO0		

GPIO Level for Input or Output Register 1 (Offset GPIOBASE+0x38)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
GPIO7	GPIO6				GPIO5	GPIO4	

4.16.2.4 GPIO Signal Invert Register (Offset 0x2C)

It will invert the polarity of the Input Port register data.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
		GPIO3	GPIO2	GPIO1	GPIO0		

Bit X = 0 means Polarity is retained

Bit X = 1 means Polarity is inverted

[Note] The GPIO4~GPIO7 can't be set to inverted.

4.16.2.5 PSUEDO CODE

Example 1 Change GPIO2 from output to input

Step1: ByteData = ReadIOByte(0x504)	//Read current setting from configuration register
Step2: ByteData = ByteData Bit 4	//Set Bit4 1. It means input
Step3: WriteIOByte(0x504, ByteData)	//Write back to configuration register

Example2 Set GPIO3 to output LOW

Step1: ByteData = ReadIOByte(0x50C)	//Read current setting from Output Port register
Step2: ByteData = ByteData & 0xDF	//Set Bit5 0. It means output low
Step3: WriteIOByte(0x50C, ByteData)	//Write back to Output Port Register

4.17 Power and System Management Signals

Signal	I/O	Description
SUS_S3#	O	Indicates system is suspended to RAM state. Active low output.
SUS_S4#	O	Indicates system is suspended to Disk state. Active low output.
SUS_S5#	O	Indicates system is in Soft Off state.
SUS_STAT#	O	Indicates imminent suspend operation.
PWRBTN#	I	Power button to bring system out of S5 (soft off), active on rising edge.
PWR_OK	I	Power OK from main power supply
BATLOW#	I	Indicates that external battery is low.
SYS_RESET#	I	Reset button input. Active low input.
CB_RESET#	O	Carrier Board Reset. Active low input.
WAKE0#	I	PCI Express wake up signal.
WAKE1#	I	General purpose wake up signal.
VCC_RTC	I	RTC External Battery
LID#	I	LID switch
SLEEP#	I	Sleep Button
FAN_PWMOUT	O	FAN PWM out
FAN_TACHIN	I	Fan Tacho in

4.18 Thermal Management Signals

Signal	I/O	Description
THRMTRIP#	O	Active low output indicating that the CPU has entered thermal shutdown.
THRM#	I	Input from off-module temp sensor indicating an over-temp situation.


4.19 Miscellaneous Signals

Signal	I/O	Description
I2C_CK	O	General purpose I2C port clock output
I2C_DAT	I/O	General purpose I2C port data I/O line
WDT	O	Indicator for Watchdog Timeout
SPKR	O	Output for audio enunciator-the “speaker” in PC-AT systems

Signal	I/O	Description
BIOS_DIS0#	I	Selection straps to determine the BIOS boot device. The Carrier should only float these or pull them low, please refer to the table below for strapping option of BIOS disable signals.
BIOS_DIS1#		

BIOS_DIS1#	BIOS_DIS0#	Chipset SPI CS1# Destination	Chipset SPI CS0# Destination	Carrier SPI_CS#	SPI Descriptor	BIOS Entry	Ref Line
1	1	Module	Module	High	Module	SPI0/SPI1	0
1	0	Module	Module	High	Module	CarrierFWH	1
0	1	Module	Carrier	SPI0	Carrier	SPI0/SPI1	2
0	0	Carrier	Module	SPI1	Module	SPI1/SPI1	3

4.20 Watchdog Timer

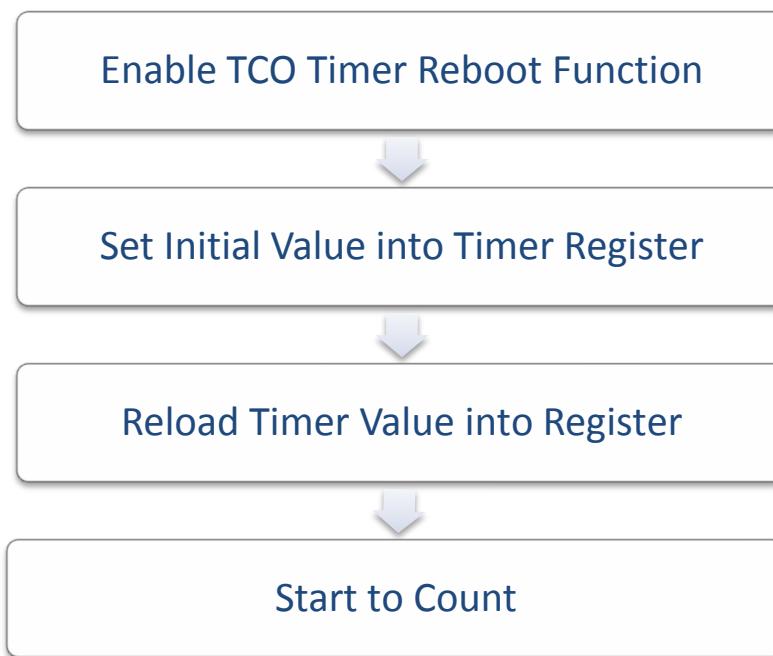

4.20.1 Board Design

The WDT (Watchdog Timer) is implemented by using TCO function in NM10.

Register	Address
TCO I/O Base (TCOBASE)	0x460
RCBA Memory Base (RCBA)	0xFED1C000

Notes:

1. TCO (Total Cost of Ownership)
2. RCBA (Root Complex Base Address)

4.20.2 PSUEDO CODE

Step1 Enable TCO Timer Reboot Function

Target: Clear RCBA+3410h Bit 5 to 0

```

Step1: DWordData = ReadMemoryDword(0xFED1F410) //0xFED1C000+0x3410
Step2: DWordData = DWordData & 0xFFFFFFFFDF      //Clear DWordData Bit
                                                5 to 0
Step3: WriteMemoryDWord(0xFED1F410, DWordData) //Write back to memory
  
```

Note:

The system will be rebooted after user's setting +2 seconds. 2 seconds added is Intel's limitation.

Step2 Set Initial Value into Timer Register

Target: Set TCO Timer Initial Value (Offset 0x12)

Step1: WordData = ReadIOWord(0x472)	//0x460+0x12
Step2: WordData = Set Bit[9:0]	//0x000~0xFFFF. 1 ticks = 0.6s
Step3: WriteIOWord(0x472, WordData)	//Write back to IO

Example:

If you want to reboot after 5 seconds, you should set WordData to 0x05.

5 - 2 = 3	//5 minus system's default 2 seconds leaves the real setting data.
3 / 0.6 = 5	//5 ticks

Step3 Reload Timer Initial Value into Register

Target: Reload Timer Initial Value to TCO_RLD Register (Offset 0x00)

Step1: WriteIOWord(0x460, 0x01)	//Reload Timer
---------------------------------	----------------

Step4 Start to Count

Target: Enable Time to count (Offset 0x08)

Step1: WordData = ReadIOWord(0x468)	//0x460+0x08
Step2: WordData = WordData & 0xF7FF	//Enabled to count
Step3: WriteIOWord(0x468, WordData)	// Write back to IO


V. SYSTEM BIOS

The system BIOS software is stored on EEPROM. The BIOS provides an interface to modify the configuration. When the battery is removed, all the parameters will be reset.

Turn on the computer and press or <F2> to enter the setup screens.

5.1 Main

The Main setup screen is showed as following when the setup utility is entered. System Date/Time is set up in the Main Menu.

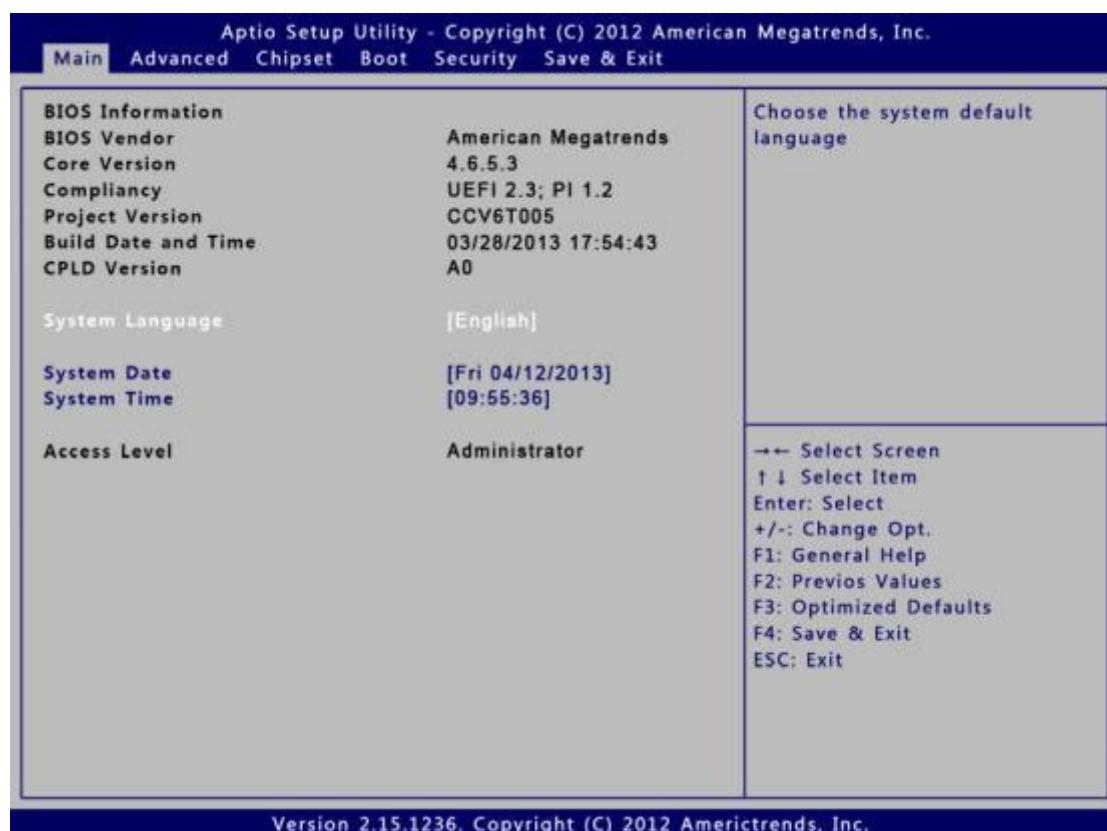


System Language: Choose the system default language

System Date: MM/DD/YYYY. Set the Date. Use Tab to switch between Date elements.

System Time: HH:MM:SS. Set the Time. Use Tab to switch between Time elements.

5.2 Advanced

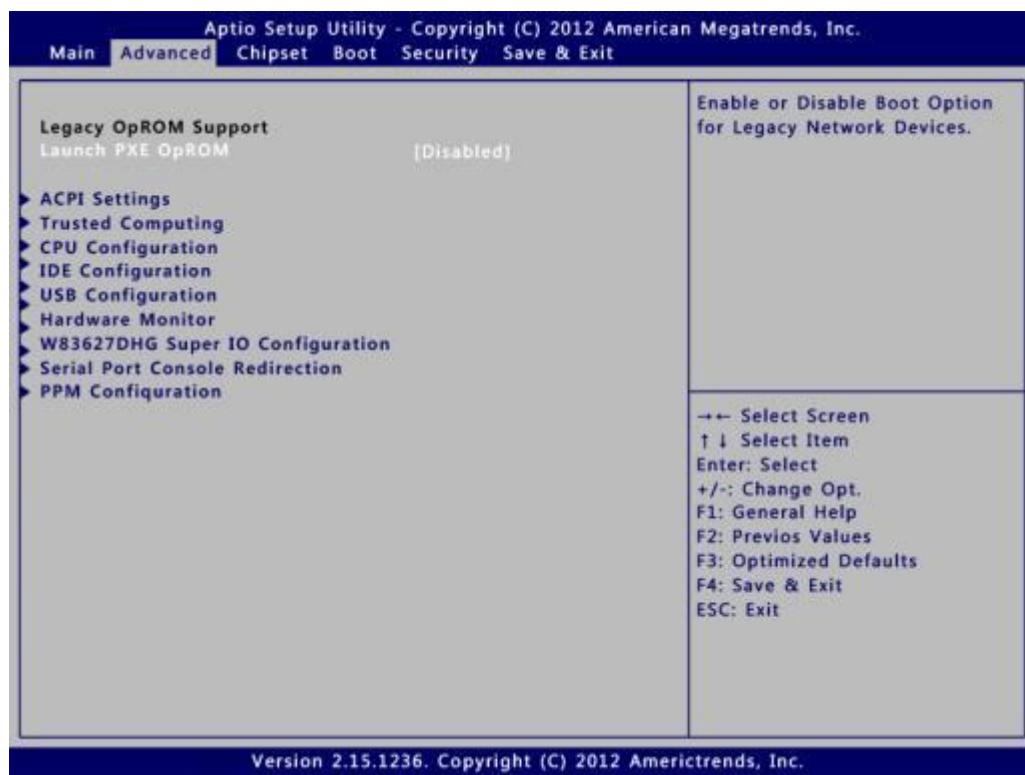

Launch PXE OpROM : Enable or Disable Boot Option for Legacy Network Devices.

5.2.1 ACPI Settings




Enable ACPI Auto Configuration: Enable or Disable BIOS ACPI Auto Configuration.

ACPI Sleep State: Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.


Select between [Suspend Disabled], [S1 (CPU Stop Clock)] and [S3 (Suspend to RAM)].

5.2.2 Trusted Computing

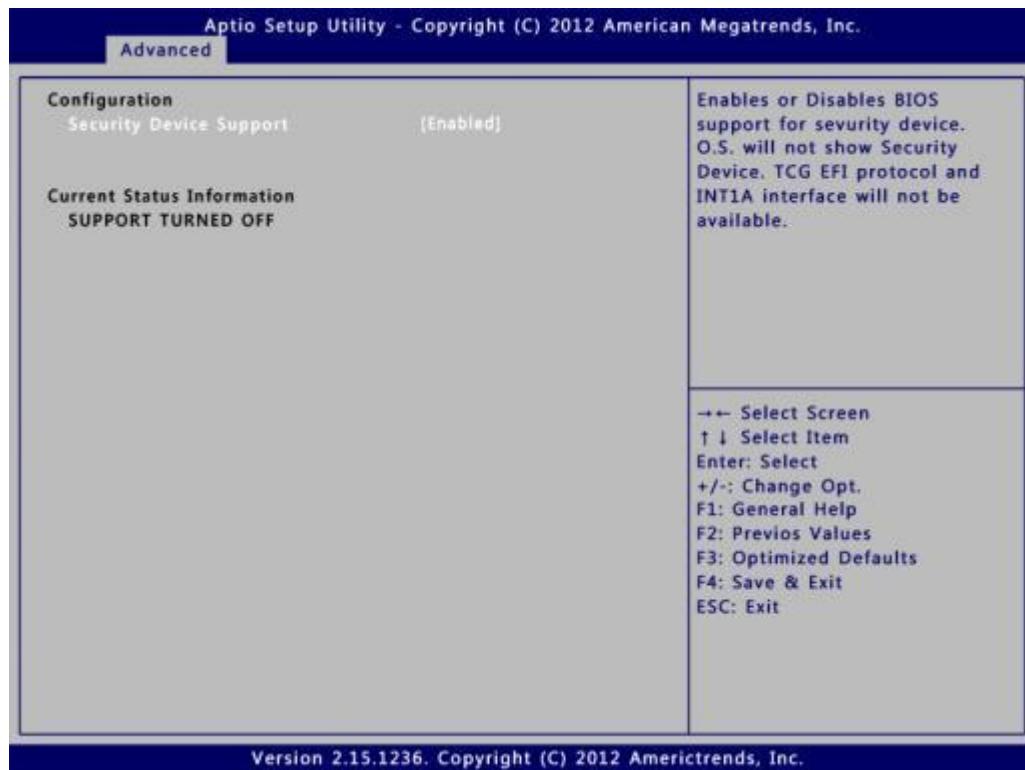

Security Device Support enables or disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

5.2.3 CPU Configuration

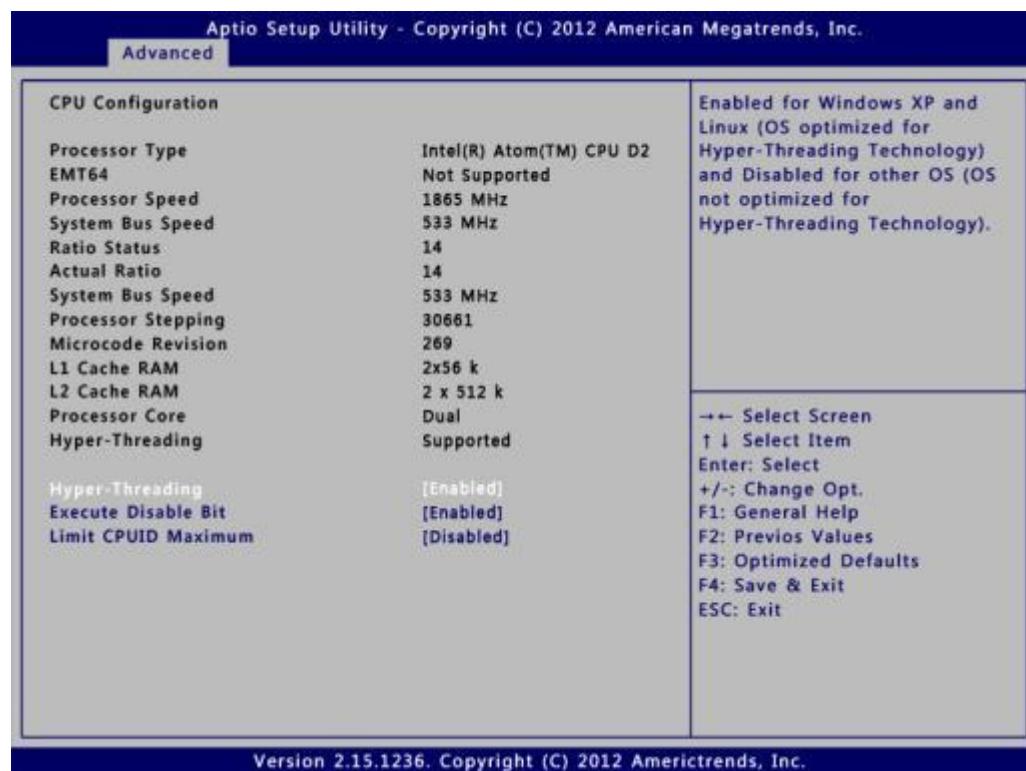

Hyper-threading: Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and disabled for other OS (OS not optimized for Hyper-Threading Technology). When disabled, only one thread per enabled core is enabled.

Execute Disable Bit: XP can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)

Limit CPUID Maximum: Disabled for Windows XP.

5.2.4 IDE Configuration


The BIOS automatically detects the presence of SATA device and the hardware installed in the SATA ports will be showed in the configuration. Each port can be enabled or disabled individually.



Configure SATA as: Select IDE or AHCI mode for SATA controller operations.

Port0 Speed Limit: Select between [No Limit], [GEN1 Rate], or [GEN2 Rate].

5.2.5 USB Configuration

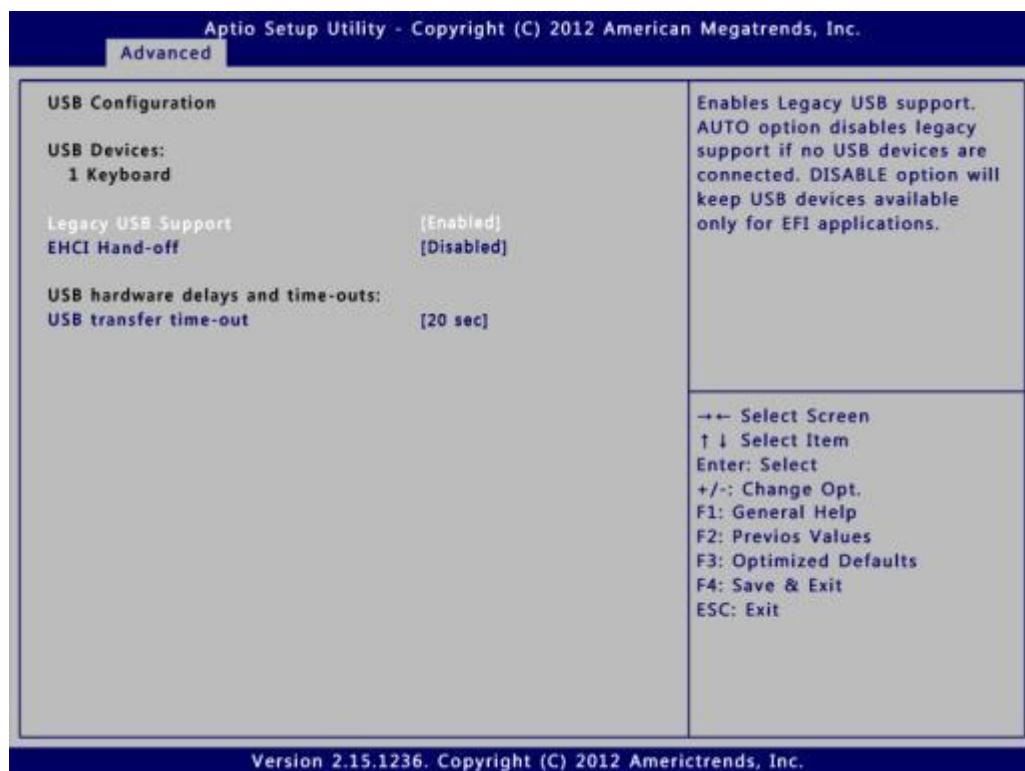


Legacy USB Support: AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.

EHCI Hand-off: This is a workaround for OS without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

USB transfer time-out: Select between [1 sec], [5 sec], [10 sec] or [20 sec].

5.2.6 Hardware Monitor

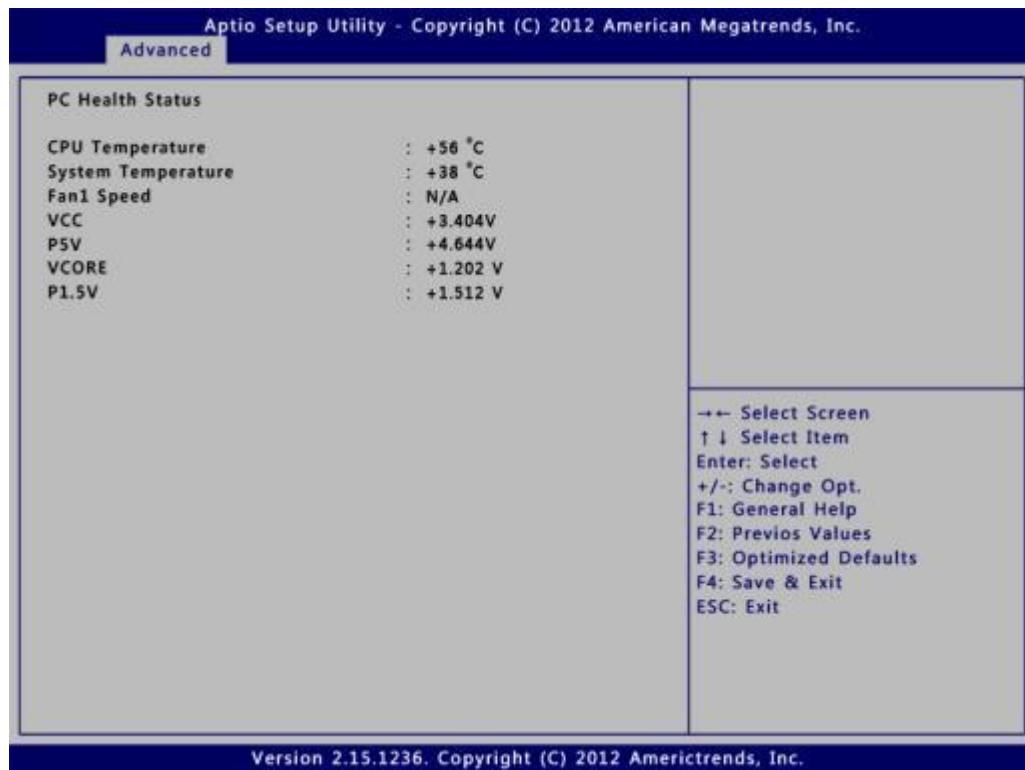


5.2.7 W83627DHG Super IO Configuration

Two serial ports could be configured.



5.2.7.1 Serial Port0 Configuration

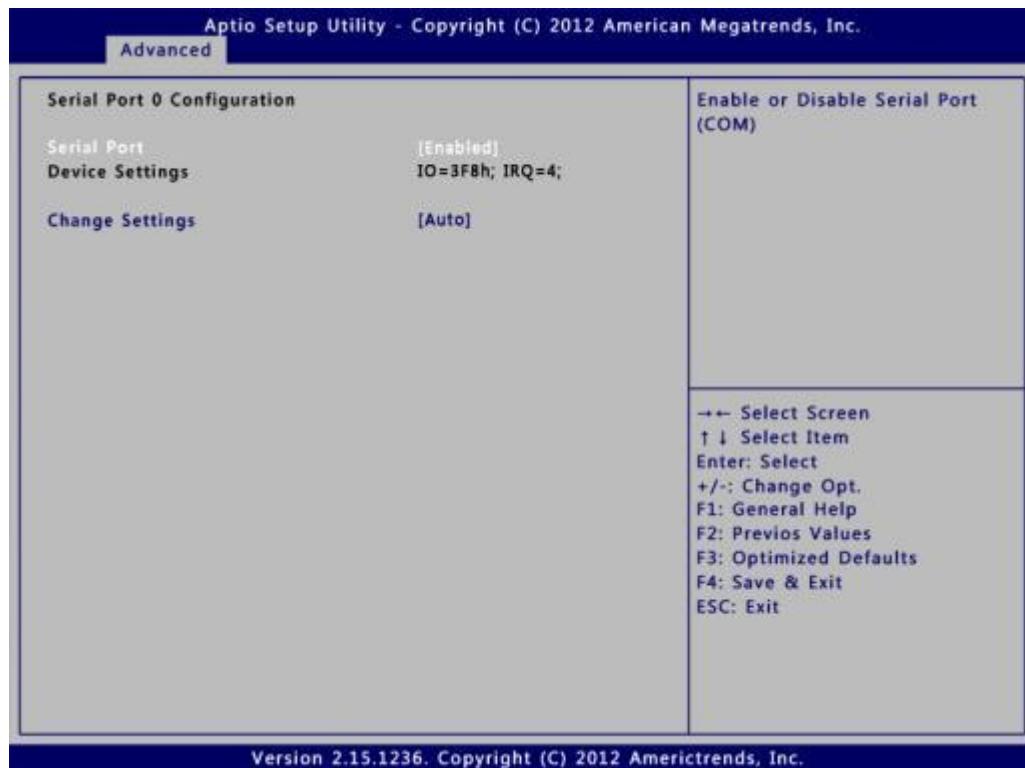

Each serial port could be enabled or disabled.

Serial Port 0 could change the setting to the following:

[Auto]

[IO=3F8h; IRQ=4;]


[IO=3F8h; IRQ=3,4,5,6,7,10,11,12;]

[IO=2F8h; IRQ=3,4,5,6,7,10,11,12;]

[IO=3E8h; IRQ=3,4,5,6,7,10,11,12;]

[IO=2E8h; IRQ=3,4,5,6,7,10,11,12;]

5.2.7.2 Serial Port1 Configuration

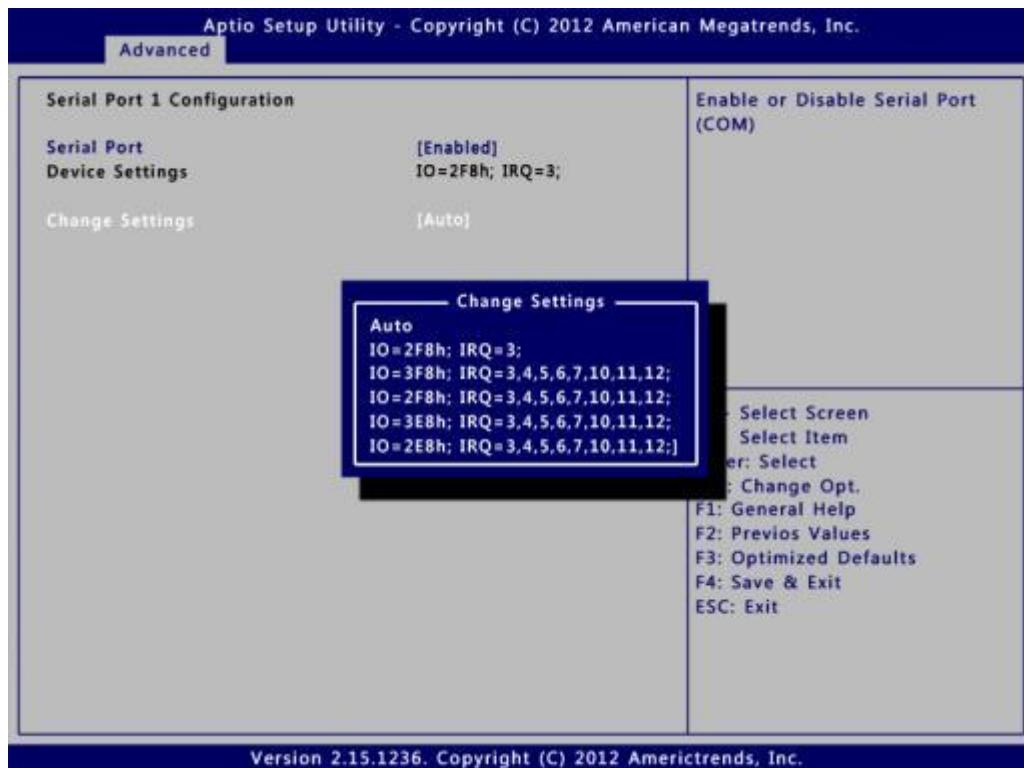

Each serial port could be enabled or disabled.

Serial Port 1 could change the setting to the following:

[Auto]

[IO=2F8h; IRQ=3;]


[IO=3F8h; IRQ=3,4,5,6,7,10,11,12;]

[IO=2F8h; IRQ=3,4,5,6,7,10,11,12;]


[IO=3E8h; IRQ=3,4,5,6,7,10,11,12;]

[IO=2E8h; IRQ=3,4,5,6,7,10,11,12;]

5.2.8 Serial Port Console Redirection

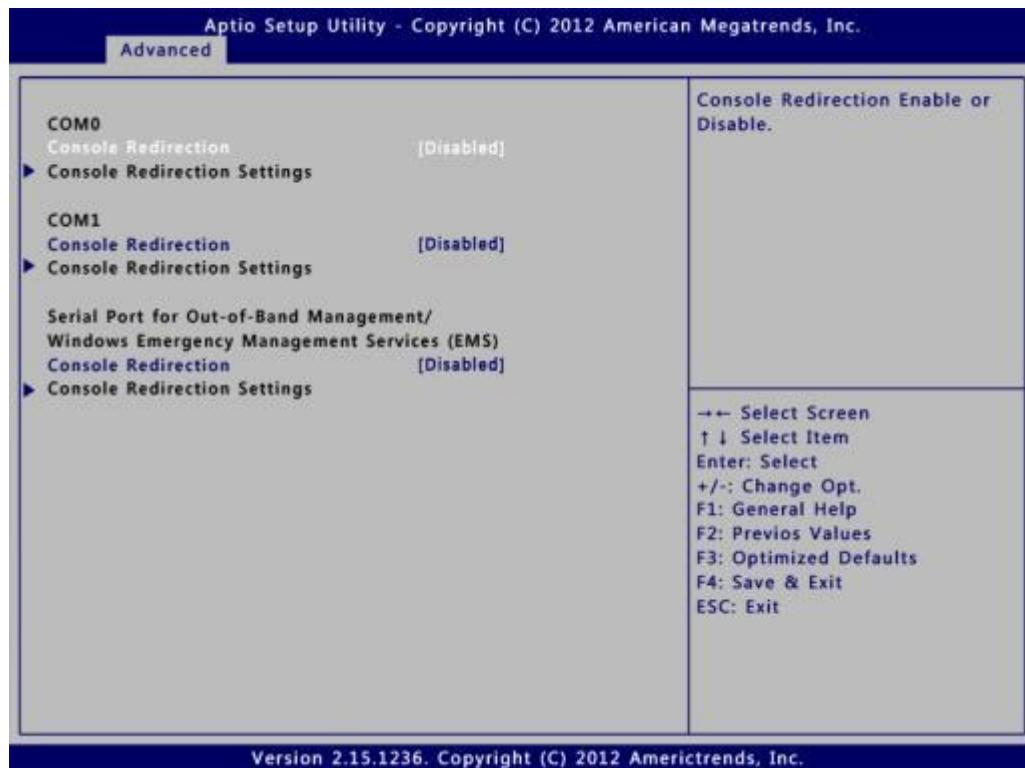


5.2.9 PPM Configuration

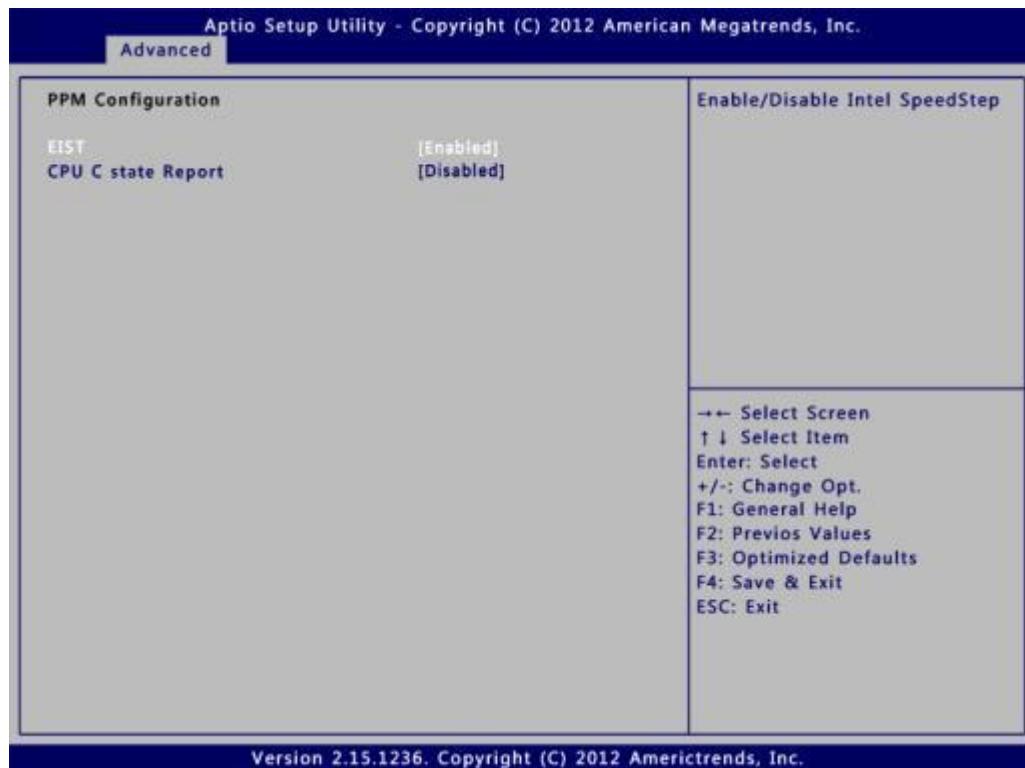


CPU C state Report

When this option is set to “enabled” (default is set to disabled), it will expand two sub-options: “Enhanced C state” and “CPU C6 state”.

5.3 Chipset

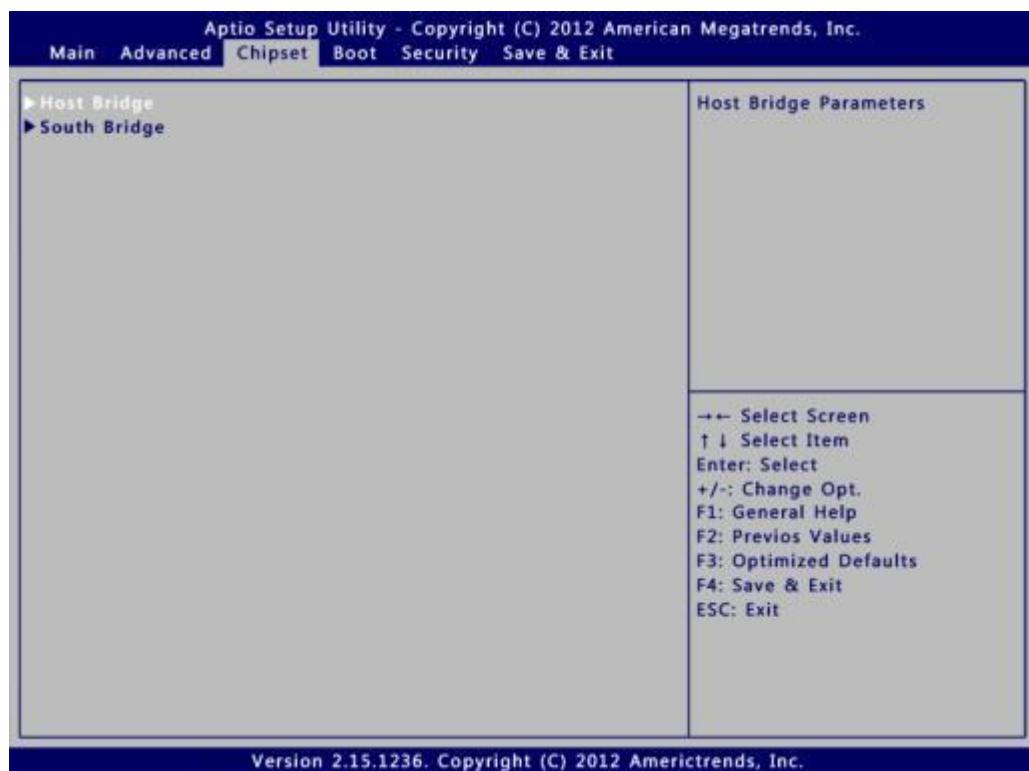


5.3.1 Host Bridge

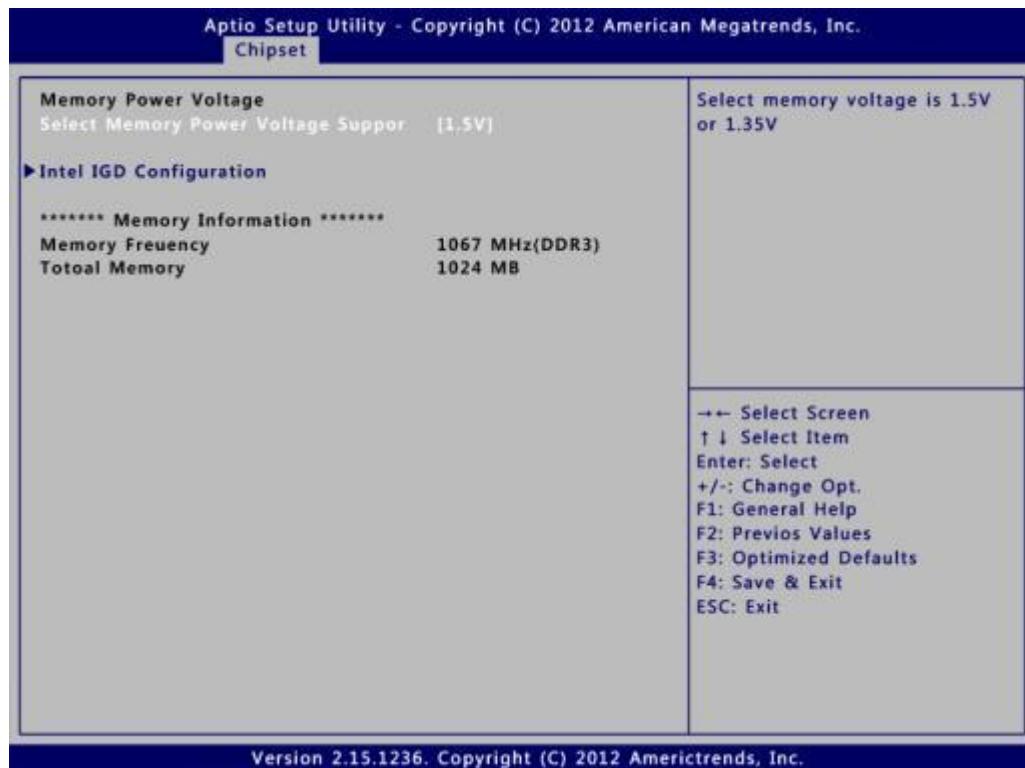

Select Memory Power Voltage Support: Select between [1.5V] and [1.35V].

5.3.1.1 Intel IGD Configuration

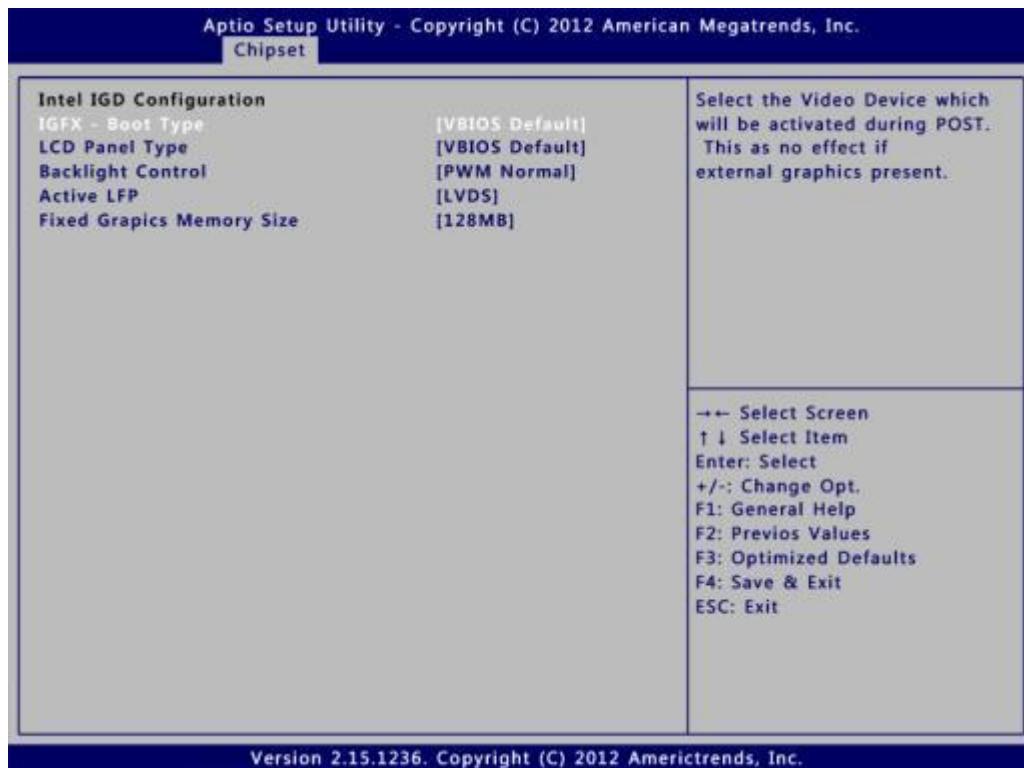

IGFX – Boot Type: Select the Video Device which will be activated during POST. This has no effect if external graphics present. Select between [VBIOS Default], [CRT], [LFP], [EFP], [CRT+EFP] and [LFP+EFP].

LCD Panel Type: Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item: [VBIOS Default], [640x480 LVDS], [800x600 LVDS], [1024x768 LVDS], [1280x1024 LVDS], [1366x768 LVDS] or [1280x800 LVDS].

Backlight Control: Select between [PWM Inverted] and [PWM Normal].


Active LFP: Select the Active LFP Configuration.

No LVDS: VBIOS does not enable LVDS.

Int-LVDS: VBIOS enables LVDS driver by Integrated encoder.

Fixed Graphics Memory Size: Select Fixed Graphics Memory Size between [128MB] or [256MB].

5.3.2 South Bridge

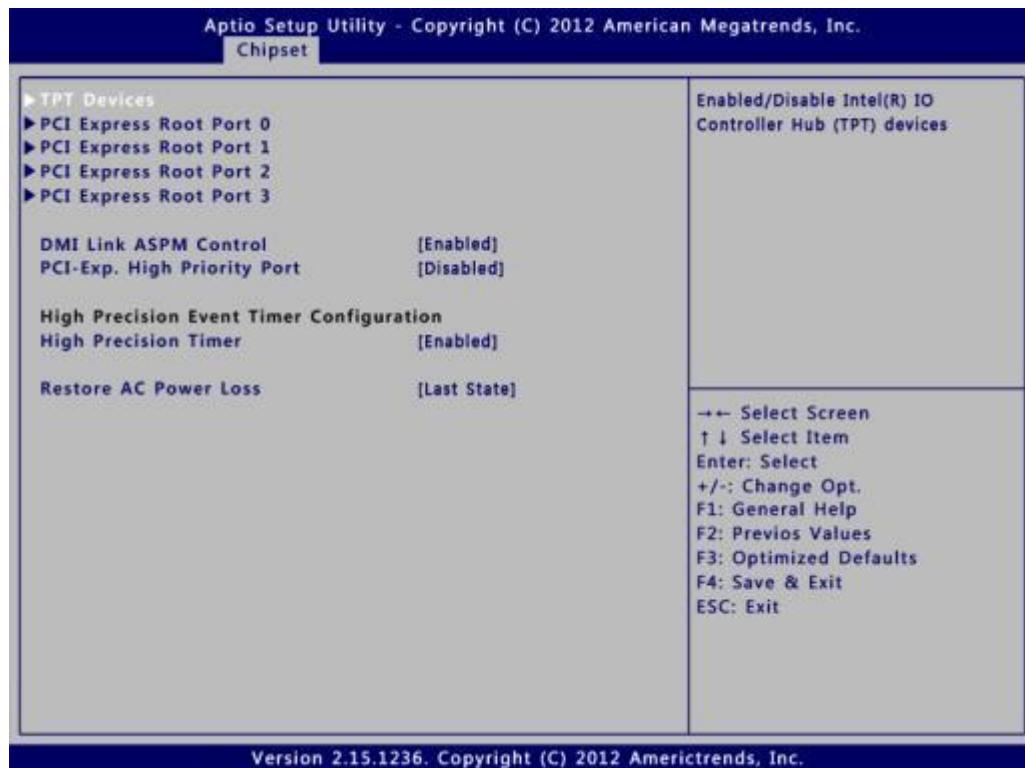

TPT Devices: Enable or disable Intel(R) IO Controller Hub (TPT) devices.


DMI Link ASPM Control: The control of Active State Power Management on both NB side and SB side of the DMI Link.

PCI-Exp. High Priority Port: Select a PCI Express High Priority Port between [Disabled], [Port 0], [Port 1], [Port 2] and [Port 3].

High Precision Timer: [Enable] or [Disable]

Restore AC Power Loss: Select between [Always OFF], [Always ON] and [Last State] when power is re-applied after a power failure.

5.3.2.1 TPT Devices

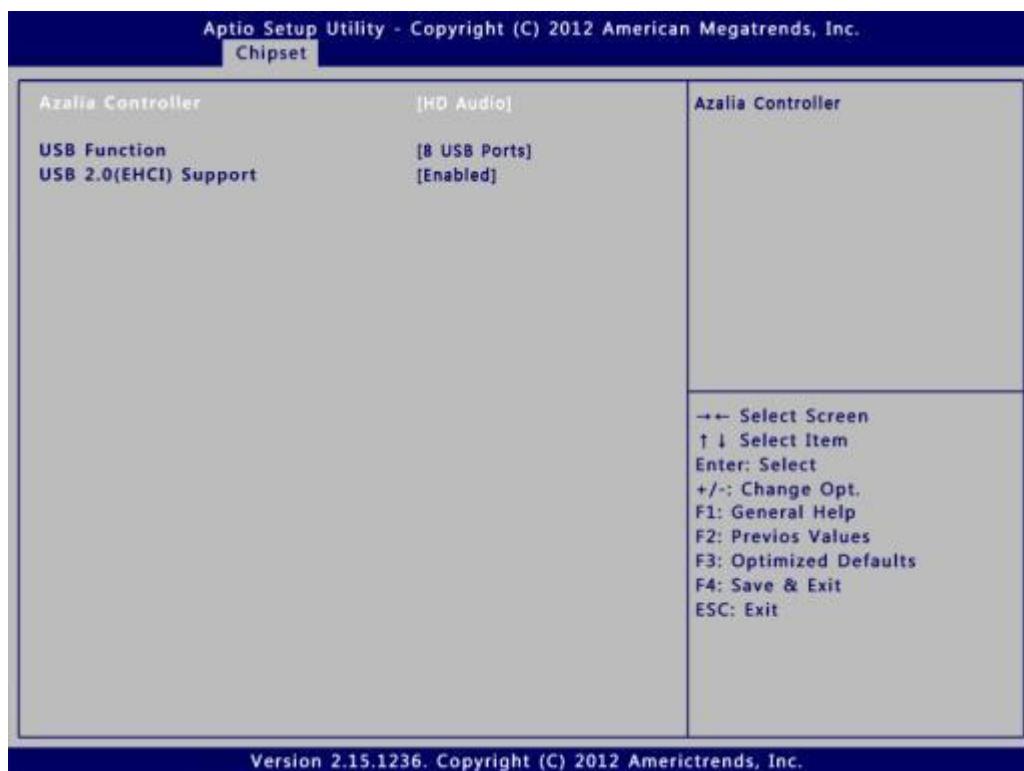


Azalia Controller: Select between [Disabled] and [HD Audio]

USB Function: Disable or enable USB Function.

USB 2.0(EHCI) Support: Enable or disable USB2.0 (EHCI) Support.

5.3.2.2 PCI Express Root Port Configuration

Each PCI Express Port from 0 to 3 can be setup.

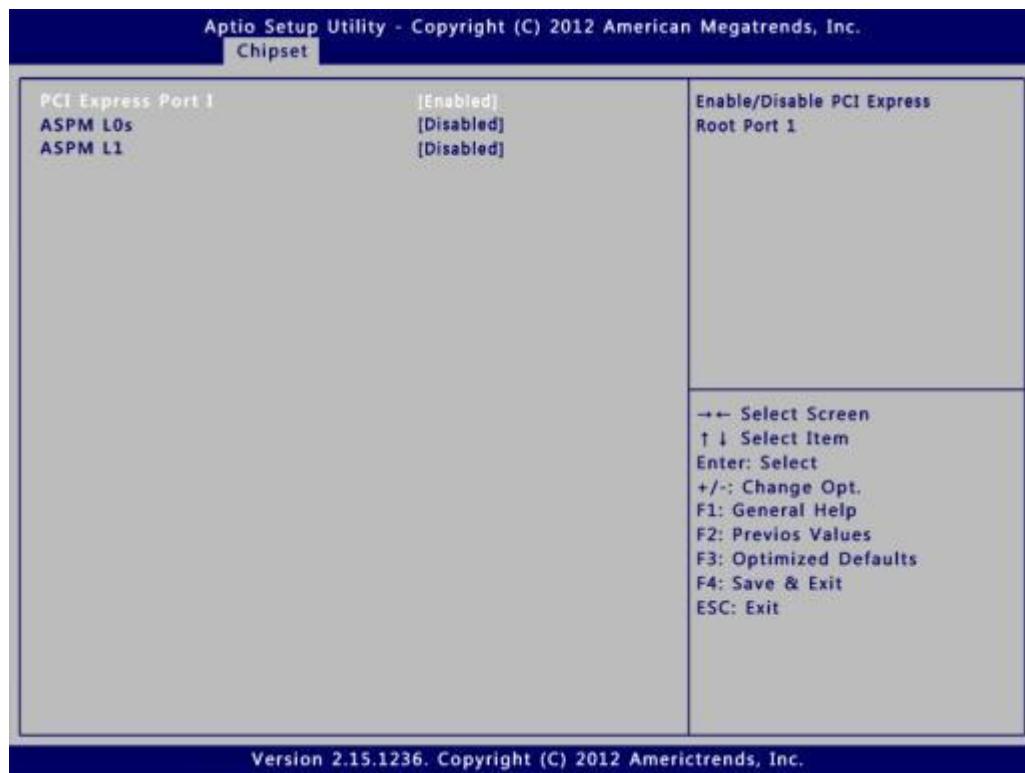


Each PCI Express Root Port can be enabled or disabled individually.

ASPM L0s: [Disabled], [Root Port Only], [Endpoint Port Only] or [Both Root And Endpoint Ports]

ASPM L1: [Disabled] or [Enabled]

5.4 Boot

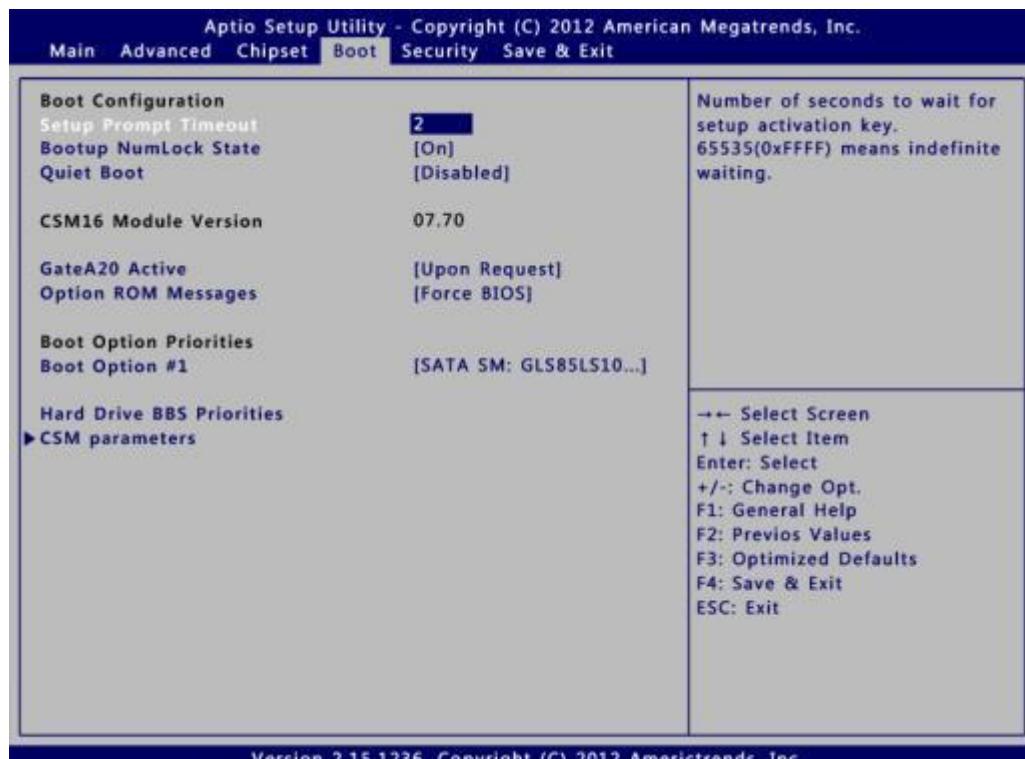

Boot Configuration: Number of seconds to wait for setup activation key.

65535 (0xFFFF) means indefinite waiting.

Bootup NumLock State: Select [Enable] or [Disable] for the keyboard NumLock state.

Quiet Boot: Enables or disables Quiet Boot option.

GateA20 Active:

[Upon Request] – GA20 can be disabled using BIOS services.

[Always] – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.

Option ROM Message: Set display mode [Force BIOS] or [Keep Current] for Option ROM.

Boot Option #1: Set the system boot order.

Hard Drive BBS Priorities: Set the order of the legacy devices in this group.

5.4.1 CSM parameters

OpROM execution, boot options filter, etc.



Launch CSM: This option controls if CSM will be launched always or never.

Boot option filer: This option controls what devices system can boot to [UEFI and Legacy], [Legacy only] or [UEFI only].

Launch PXE OpROM policy: This controls the execution of UEFI and Legacy PXE OpROM, [Do not launch], [UEFI only] or [Legacy only].

Launch Storage OpROM policy: This controls the execution of UEFI and Legacy Storage OpROM, [Do not launch], [UEFI only] or [Legacy only].


Launch Video OpROM policy: This controls the execution of UEFI and Legacy Video OpROM, [Do not launch], [UEFI only] or [Legacy only].

Other PCI device ROM priority: For PCI devices other than Network, Mass storage or Video defines which OpROM to launch, [UEFI OpROM] or [Legacy OpROM].

5.5 Security

Administrator's and User's passwords could be set.

If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup. If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup, the user will have administrator rights. The minimum length of the password is 3 and the maximum length is 20.

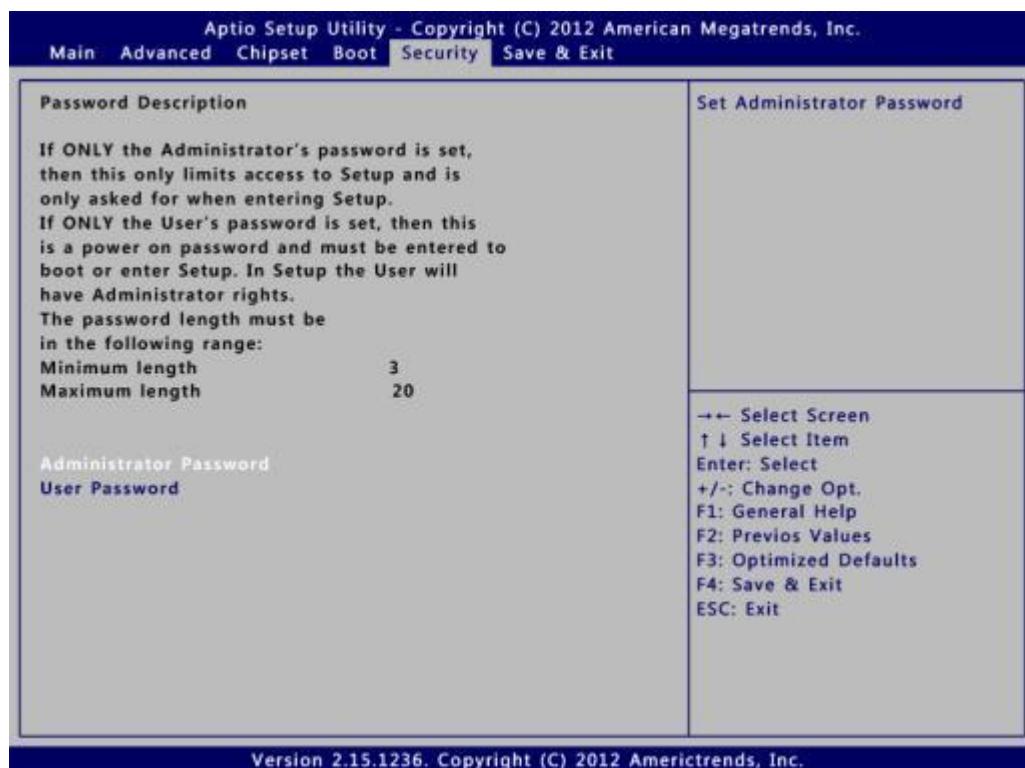

5.6 Save and Exit



Save Changes and Exit: Exit system setup after saving the changes.

Discard Changes and Exit: Exit system setup without saving any changes.

Save Changes and Reset: Reset the system after saving the changes.

Discard Changes and Reset: Reset system setup without saving any changes.

Save Changes: Save Changes done so far to any of the setup options.

Discard Changes: Discard Changes done so far to any of the setup options.

Restore Defaults: Restore/Load Default values for all the setup options.

Save as User Defaults: Save the changes done so far as user Defaults.

Restore user Defaults: Restore the User Defaults to all the setup options.

Launch EFI Shell from filesystem device: Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

VI. Address Map

6.1 I/O Port Address Map

The assignment of the I/O port addresses for the CT-CCV6X with CT-BT601 carrier board under Windows® 7 Ultimate/64bit are shown below.

	Input/output (IO)
	[00000000 - 0000001F] Direct memory access controller
	[00000000 - 00000CF7] PCI bus
	[00000010 - 0000001F] Motherboard resources
	[00000020 - 00000021] Programmable interrupt controller
	[00000022 - 0000003F] Motherboard resources
	[00000024 - 00000025] Programmable interrupt controller
	[00000028 - 00000029] Programmable interrupt controller
	[0000002C - 0000002D] Programmable interrupt controller
	[0000002E - 0000002F] Motherboard resources
	[00000030 - 00000031] Programmable interrupt controller
	[00000034 - 00000035] Programmable interrupt controller
	[00000038 - 00000039] Programmable interrupt controller
	[0000003C - 0000003D] Programmable interrupt controller
	[00000040 - 00000043] System timer
	[00000044 - 0000005F] Motherboard resources
	[0000004E - 0000004F] Motherboard resources
	[00000050 - 00000053] System timer
	[00000060 - 00000060] Standard PS/2 Keyboard
	[00000061 - 00000061] Motherboard resources
	[00000062 - 00000063] Motherboard resources
	[00000063 - 00000063] Motherboard resources
	[00000064 - 00000064] Standard PS/2 Keyboard
	[00000065 - 00000065] Motherboard resources
	[00000065 - 0000006F] Motherboard resources
	[00000067 - 00000067] Motherboard resources
	[00000070 - 00000070] Motherboard resources
	[00000070 - 00000077] System CMOS/real time clock
	[00000072 - 0000007F] Motherboard resources
	[00000080 - 00000080] Motherboard resources
	[00000080 - 00000080] Motherboard resources
	[00000081 - 00000091] Direct memory access controller
	[00000084 - 00000086] Motherboard resources
	[00000088 - 00000088] Motherboard resources
	[0000008C - 0000008E] Motherboard resources
	[00000090 - 0000009F] Motherboard resources
	[00000092 - 00000092] Motherboard resources
	[00000093 - 0000009F] Direct memory access controller
	[000000A0 - 000000A1] Programmable interrupt controller
	[000000A2 - 000000BF] Motherboard resources
	[000000A4 - 000000A5] Programmable interrupt controller

[000000A8 - 000000A9] Programmable interrupt controller
[000000AC - 000000AD] Programmable interrupt controller
[000000B0 - 000000B1] Programmable interrupt controller
[000000B2 - 000000B3] Motherboard resources
[000000B4 - 000000B5] Programmable interrupt controller
[000000B8 - 000000B9] Programmable interrupt controller
[000000BC - 000000BD] Programmable interrupt controller
[000000C0 - 000000DF] Direct memory access controller
[000000E0 - 000000EF] Motherboard resources
[000000F0 - 000000F0] Numeric data processor
[00002F8 - 000002FF] 通訊連接埠 (COM2)
[00003B0 - 000003BB] Intel(R) Graphics Media Accelerator 3600 Series
[00003C0 - 000003DF] Intel(R) Graphics Media Accelerator 3600 Series
[00003F8 - 000003FF] 通訊連接埠 (COM1)
[0000400 - 0000047F] Motherboard resources
[0000400 - 0000047F] Motherboard resources
[00004D0 - 000004D1] Motherboard resources
[00004D0 - 000004D1] Programmable interrupt controller
[0000500 - 0000053F] Motherboard resources
[0000500 - 0000057F] Motherboard resources
[0000600 - 0000061F] Motherboard resources
[0000680 - 0000069F] Motherboard resources
[00006A0 - 000006AF] Motherboard resources
[00006B0 - 000006EF] Motherboard resources
[0000A10 - 00000A1F] Motherboard resources
[0000D00 - 0000FFFF] PCI bus
[0001000 - 0000100F] Motherboard resources
[000E000 - 0000EFFF] Intel(R) N10/ICH7 Family PCI Express Root Port - 27D6
[000F000 - 0000F01F] Intel(R) N10/ICH7 Family SMBus Controller - 27DA
[000F020 - 0000F02F] Standard AHCI1.0 Serial ATA Controller
[000F040 - 0000F05F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CB
[000F060 - 0000F07F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CA
[000F080 - 0000F09F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C9
[000F0A0 - 0000F0BF] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C8
[000FOC0 - 0000F0C3] Standard AHCI1.0 Serial ATA Controller
[000F0D0 - 0000F0D7] Standard AHCI1.0 Serial ATA Controller
[000FOE0 - 0000F0E3] Standard AHCI1.0 Serial ATA Controller
[000FOF0 - 0000F0F7] Standard AHCI1.0 Serial ATA Controller
[000F100 - 0000F107] Intel(R) Graphics Media Accelerator 3600 Series
[000FFFF - 0000FFFF] Motherboard resources
[000FFFF - 0000FFFF] Motherboard resources

6.2 Interrupt Controller (IRQ) Map

The interrupt controller map for the CT-CCV6X with the CT-BT601 carrier board under Windows® 7 Ultimate/64bit are as shown below.


Interrupt request (IRQ)	
(ISA) 0x00000000 (00)	System timer
(ISA) 0x00000001 (01)	Standard PS/2 Keyboard
(ISA) 0x00000003 (03)	通訊連接埠 (COM2)
(ISA) 0x00000004 (04)	通訊連接埠 (COM1)
(ISA) 0x00000008 (08)	System CMOS/real time clock
(ISA) 0x0000000D (13)	Numeric data processor
(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
(ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
(ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
(ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
(ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
(ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
(ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
(ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
(ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
(ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
(ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
(ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
(ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
(ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
(ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
(ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
(ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
(ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
(ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
(ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
(ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
(ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
(ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
(ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
(ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
(ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
(ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
(ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
(ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
(ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
(ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
(ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
(ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
(ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
(ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System

└ (ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
└ (ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000009A (154)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000009B (155)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000009C (156)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000009D (157)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000009E (158)	Microsoft ACPI-Compliant System
└ (ISA) 0x0000009F (159)	Microsoft ACPI-Compliant System
└ (ISA) 0x000000A0 (160)	Microsoft ACPI-Compliant System
└ (ISA) 0x000000A1 (161)	Microsoft ACPI-Compliant System
└ (ISA) 0x000000A2 (162)	Microsoft ACPI-Compliant System
└ (ISA) 0x000000A3 (163)	Microsoft ACPI-Compliant System
└ (ISA) 0x000000A4 (164)	Microsoft ACPI-Compliant System

ISA	0x000000A5 (165)	Microsoft ACPI-Compliant System
ISA	0x000000A6 (166)	Microsoft ACPI-Compliant System
ISA	0x000000A7 (167)	Microsoft ACPI-Compliant System
ISA	0x000000A8 (168)	Microsoft ACPI-Compliant System
ISA	0x000000A9 (169)	Microsoft ACPI-Compliant System
ISA	0x000000AA (170)	Microsoft ACPI-Compliant System
ISA	0x000000AB (171)	Microsoft ACPI-Compliant System
ISA	0x000000AC (172)	Microsoft ACPI-Compliant System
ISA	0x000000AD (173)	Microsoft ACPI-Compliant System
ISA	0x000000AE (174)	Microsoft ACPI-Compliant System
ISA	0x000000AF (175)	Microsoft ACPI-Compliant System
ISA	0x000000B0 (176)	Microsoft ACPI-Compliant System
ISA	0x000000B1 (177)	Microsoft ACPI-Compliant System
ISA	0x000000B2 (178)	Microsoft ACPI-Compliant System
ISA	0x000000B3 (179)	Microsoft ACPI-Compliant System
ISA	0x000000B4 (180)	Microsoft ACPI-Compliant System
ISA	0x000000B5 (181)	Microsoft ACPI-Compliant System
ISA	0x000000B6 (182)	Microsoft ACPI-Compliant System
ISA	0x000000B7 (183)	Microsoft ACPI-Compliant System
ISA	0x000000B8 (184)	Microsoft ACPI-Compliant System
ISA	0x000000B9 (185)	Microsoft ACPI-Compliant System
ISA	0x000000BA (186)	Microsoft ACPI-Compliant System
ISA	0x000000BB (187)	Microsoft ACPI-Compliant System
ISA	0x000000BC (188)	Microsoft ACPI-Compliant System
ISA	0x000000BD (189)	Microsoft ACPI-Compliant System
ISA	0x000000BE (190)	Microsoft ACPI-Compliant System
PCI	0x0000000B (11)	Intel(R) N10/ICH7 Family SMBus Controller - 27DA
PCI	0x00000010 (16)	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D0
PCI	0x00000010 (16)	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CB
PCI	0x00000011 (17)	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D2
PCI	0x00000012 (18)	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D4
PCI	0x00000012 (18)	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CA
PCI	0x00000013 (19)	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D6
PCI	0x00000013 (19)	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C9
PCI	0x00000013 (19)	Standard AHCI1.0 Serial ATA Controller
PCI	0x00000016 (22)	High Definition Audio Controller
PCI	0x00000017 (23)	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C8
PCI	0x00000017 (23)	Intel(R) N10/ICH7 Family USB2 Enhanced Host Controller - 27CC
PCI	0xFFFFFFF4 (-4)	Intel(R) 82583V Gigabit Network Connection
PCI	0xFFFFFFF4 (-3)	Texas Instruments XHCI Controller
PCI	0xFFFFFFF4 (-2)	Intel(R) Graphics Media Accelerator 3600 Series

6.3 Memory Map

The memory map of DRAM for the CT-CCV6X with CT-BT601 carrier board under Windows® 7 Ultimate/64bit are shown below.

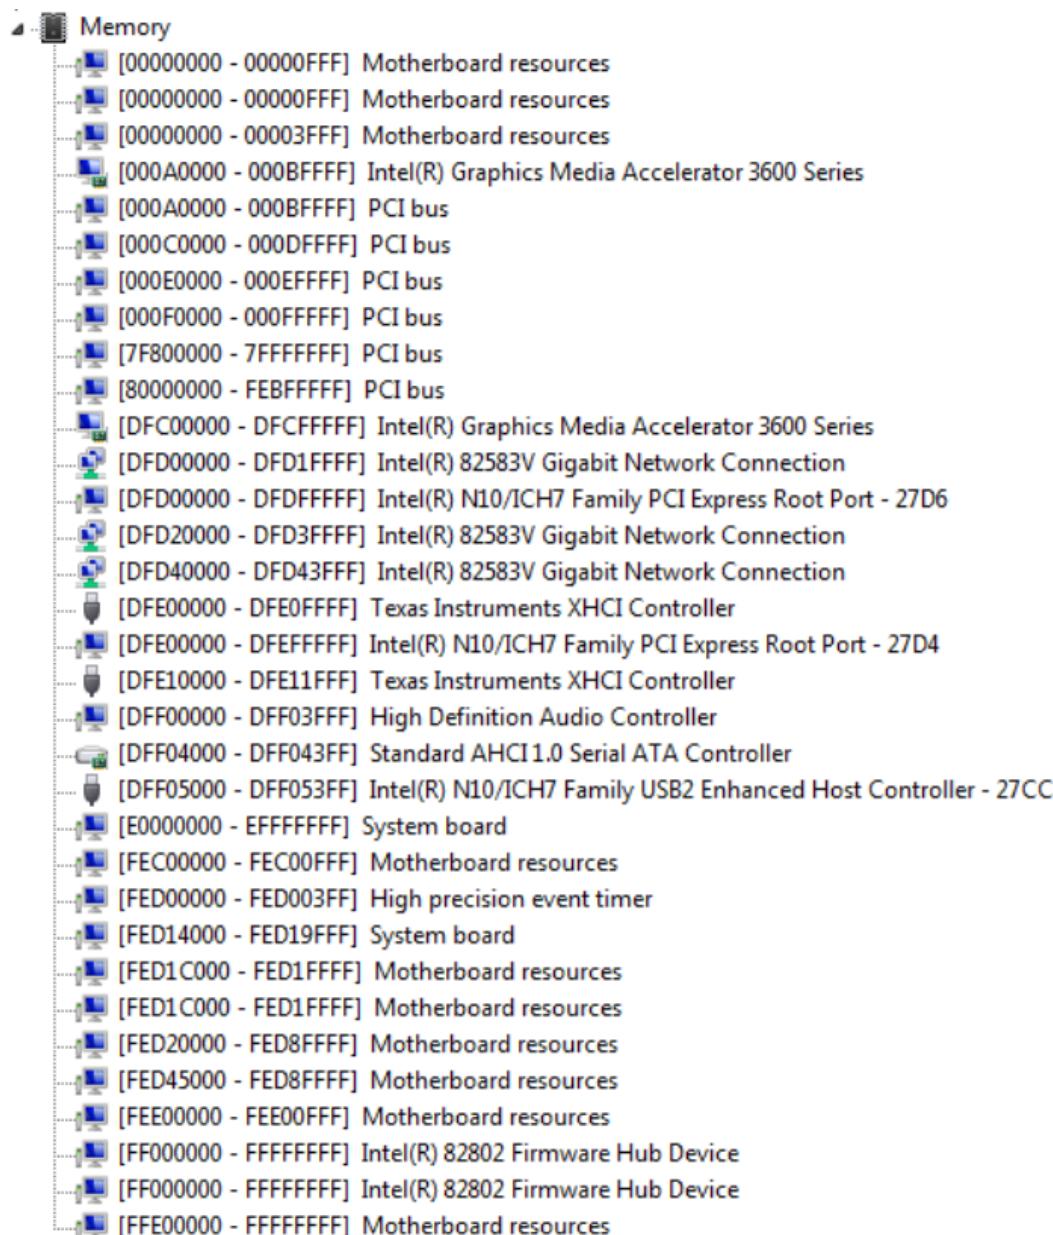

VII. Electrical Specification

7.1 Input Power

The carrier board for the CT-CCV6X shall supply a single main power rail with a nominal value of +12V and two additional rails, a +5V standby power and +3V RTC power.